

# MAJORITY

## SCAFELL PIKE II

---

### Audio Soundbar & Wired Subwoofer

SKP-BAR-BLK-2



Instructions Guide

 
# Contents

<b>Controls And Functions</b> .....	1
<b>What's In The Box?</b> .....	5
<b>Support</b> .....	6
<b>Instructions Guide</b> .....	7
Wall Mounting .....	7
Mode Indicator Lights.....	9
Fixing the Soundbar .....	10
Using the Optical Input .....	11
Using the MP3 LINK Connection (Line In).....	12
Connecting to the Mains Supply.....	13
Connecting the Subwoofer with the Soundbar .....	14
Bluetooth Operation.....	15
<b>Troubleshooting</b> .....	17
<b>Specification</b> .....	18
<b>Warranty</b> .....	18
<b>Safety Information</b> .....	19

**3 YEAR  
WARRANTY**


Watch video tutorials and register  
your product for a FREE 3-year warranty  
at [www.majorityradios.co.uk](http://www.majorityradios.co.uk)

## Front View/LED Indicator Light




1. Speaker Drivers
2. Remote Control Sensor
3. LED Indicator Light

## Side View: Buttons

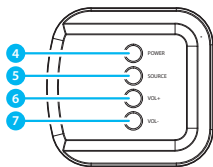 

4. Switch the unit on or off
5. SOURCE: Bluetooth, AUX in, LINE in or OPTICAL in
6. Volume increase
7. Volume decrease

## Rear View: Panel Interface Connection

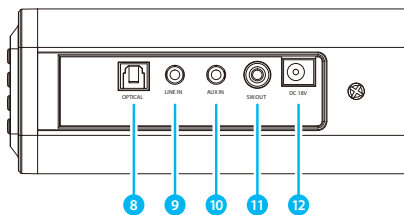 


8. OPTICAL In Socket
9. 3.5mm Line In Socket
10. AUX (L/R) In Socket
11. Subwoofer Output
12. DC 18V 1.5A Socket

## Automatic Power Off Function

 The Majority Scafell Pike will automatically turn to standby mode after 60 minutes if the TV or external unit is discontinued or switched off.

## Remote Control

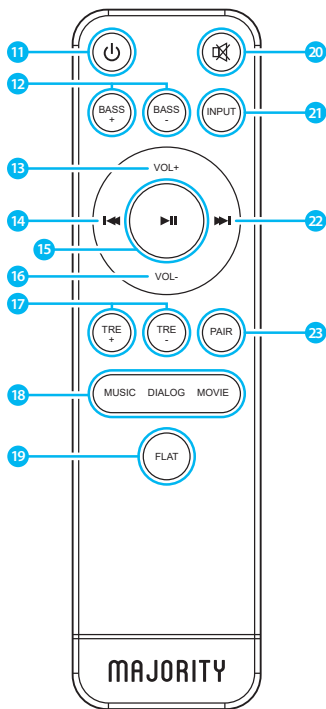

- 11. Power On/Off**  
Switch the unit between on and Standby mode
- 12. Bass increase/decrease**  
Select to adjust the bass
- 13. Volume +**  
Press to increase the volume
- 14. Back Step**  
Use in Bluetooth mode to go back a track.
- 15. Play/Pause**  
Use in Bluetooth mode, press to pause/play media.
- 16. Volume -**  
Press to decrease the volume
- 17. Treble increase/decrease**  
Select to adjust the treble
- 18. Media Modes: Music, Dialogue or Movie**  
Press relevant button for the media type for the best sound quality
- 19. FLAT**  
Press button to restore to default sound settings.
- 20.** Mute
- 21.** Input
- 22.** Next Step
- 23.** Pair

### 20. MUTE

Press to mute and unmute sound.

### 21. INPUT

Press repeatedly to switch between modes

### 22. Forward Step

Use in Bluetooth mode to go forward a track.

### 23. PAIR

In Bluetooth mode, press to pair with your device. Press again to disconnect.

### Using the Remote Control

---

The remote control sensor at the front of the soundbar is sensitive to the remote control's commands up to a maximum of 6 metres away and within a maximum arc of 40 degrees.

 
Please note that the operating distance may vary depending on the brightness of the room.

## Box Contents


1. Majority Scafell Pike Soundbar
2. Remote Control
3. Adapter
4. 3.5mm to 3.5mm Audio cable
5. RCA Stereo Audio Cable
6. Subwoofer
7. Wall Bracket
8. Wall Fixing and Screws
9. Instructions Guide



Majority Scafell Pike II Soundbar



Remote Control

 


Adapter




3.5mm to  
3.5mm Audio  
Cable



 RCA Stereo  
Audio Cable

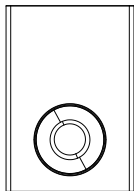

Subwoofer

 

Wall Bracket



Wall Fixing and  
Screws



Instruction  
Guide

### Support

---

Thank you for your purchase of the Majority Scafell Pike II.

Please follow the guidance of the manual to set up your new purchase and begin enjoying its features.

If you require further assistance with your new soundbar, please contact our support team on the Majority website:

<https://www.majorityradios.co.uk/support>



## Wall Mounting

---

### Safety

1. Incorrect assembly can result in severe personal injury and property damage. If you are going to install this Soundbar yourself, you must have studied installations, such as electrical wiring and plumbing that may be buried inside the wall. It is installer's responsibility to verify that the wall safely support the total load of the Soundbar.
2. Additional tools (not included) are required for the installation.
3. Do not over-tighten screws.
4. Keep this user manual for future reference.
5. Use an electric stud finder to check the wall type before drilling and mounting.

### Tools & Fixings Required

 
- |  |                 |
|--|-----------------|
| 1. Drill fitted with masonry drill bit | 3. Pencil       |
| 2. Screwdriver                         | 4. Ruler        |
|  | 5. Spirit level |
- Place the soundbar in the desired position and using a spirit level, check that the soundbar is level.
  - Make a light pencil mark on the wall at the top edge of both fixing brackets. The mark should be positioned directly above each bracket. Note the mounting points on the soundbar (one is 170mm from the end while the other is

## Instructions Guide


170mm from the other end),so you should use the soundbar as a template to get the right mounting positions.

- Place the soundbar away from the work area and then mark two fixing points 7mm below the light pencil marks for the screws. These marks should be 470mm apart and level. Before drilling, use a spirit level to check that the fixing points marked are level.


Distance between the holes of two metal brackets



 - If fixing to a solid masonry wall, use a masonry drill bit, drill holes to a depth of approximately 30mm and insert the wall plugs. Insert the screws into the wall plugs and drive home the screws until the heads stand proud of the wall by about 1mm.

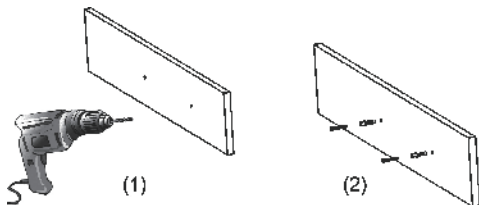

- If fixing to timber, follow the directions above, but only drill a small pilot hole for each screw and do not use the wall plugs provided.
- If fixing to hollow plaster board walls, use a drill bit suitable for wood and replace the wall plugs with wall anchors appropriate for the application. Locate the fixing points into wall studs and cross braces where possible.
- Locate the soundbar onto the screw heads and check that the screws are fully engaged into the keyhole mount before releasing your hold.

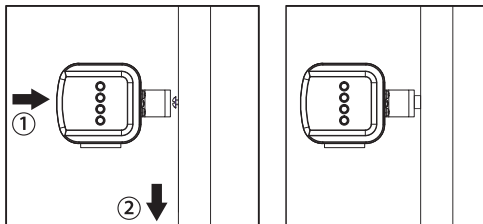 

## Mode Indicator Lights

---

<b>State</b>	<b>Indicator Lights</b>
Power off	Red
Optical mode	Yellow
AUX mode	White
Line in mode	Green
Bluetooth ready	Flashing blue
Bluetooth connected	Blue

 
## Fixing the Soundbar

Use the RCA Stereo Audio Cable to connect the TV's stereo RCA(L/R) socket to the AUX(L/R) sockets of the unit.

Then press the INPUT button on the remote control (**Ref.21**) or press the SOURCE button on the soundbar repeatedly (**Ref.5**) to choose the AUX function. A white light will display via the LED indicator once selected.

Turn on your television set to use the Majority Scafell Pike II.

Please check the ports that the RCA cable are being inputted into on your TV. If the TV ports are 'input' rather than 'output', please use a different process to connect the soundbar to your TV.

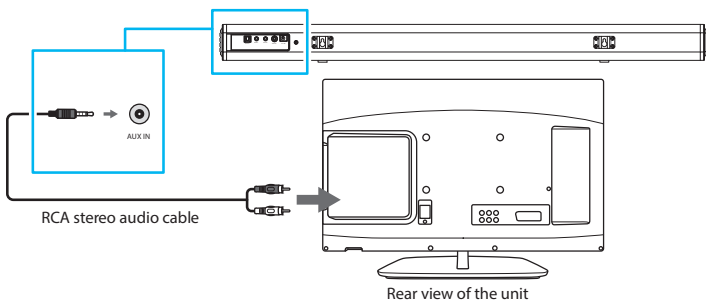

## Using the Optical Input

**You will need: An audio source with an Optical Audio Output and a Digital Optical Audio cable (not included)**

 
Connect the Digital Optical Audio cable to the optical output on the audio source and to the Optical Input on the speaker bar.

Press the POWER button on side panel (**Ref.4**) or POWER button directly on the remote control (**Ref.11**) to switch on the unit.

Press INPUT button on the remote control (**Ref.21**) to switch to Optical mode or press the SOURCE button on the soundbar (**Ref.5**) repeatedly to select Optical mode. The mode indicator LED will turn Yellow.

Using the native controls on your connected device, make sure the audio settings are set to PCM or Optical Audio and are turned On.

Audio from the connected audio source will now be played through the speakers.

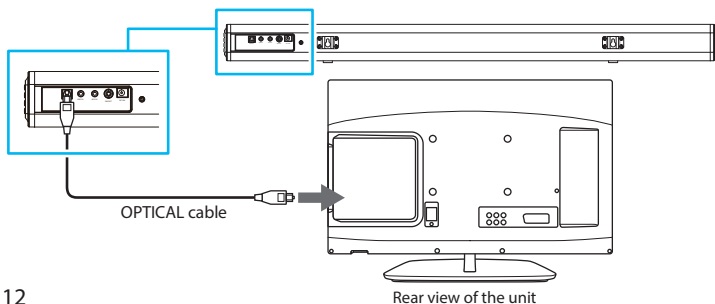

## Using the MP3 LINK Connection (Line In)

 
Plug one end of a 3.5mm audio input cable (included) into the Line in on the unit (**Ref.10**). Before use, disconnect any cables connected to the Stereo RCA Inputs.

Plug the other end of the cable into the audio output/headphone output on an MP3 player or other audio source.

Press the POWER button on side panel (**Ref.4**) or POWER button directly on the remote control (**Ref.11**) to switch on the unit.

Press INPUT button repeatedly on the remote control (**Ref.21**) or press the SOURCE button on the soundbar (**Ref.5**) repeatedly to enter LINE in mode. The mode indicator will turn green.

Audio played through the connected device will now be heard through the speakers.

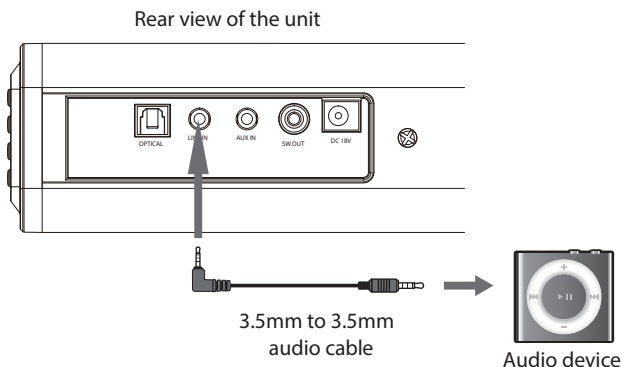

## Connecting to the Mains Supply

Ensure that the power supply voltage is in the voltage of 100V~240V.

 
This unit is designed to use adapter.

Connecting the unit to any other power source may cause damage to the unit.

Unwind the mains cable to its full length. Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket.

The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.

Connect the Adapter to the unit and AC Socket.

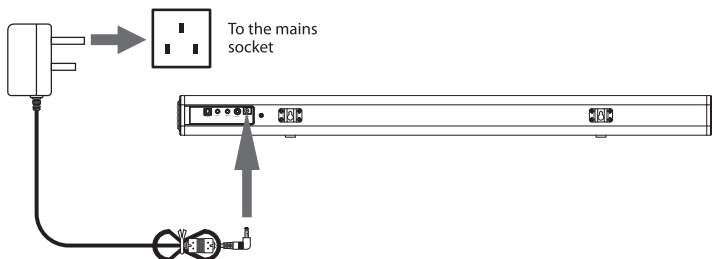

Ensure all audio connections of the unit are connected before connecting to the mains power socket.


Unplug the power cord from the outlet when the unit is use for an extended period of time.



## Connecting the Subwoofer with the Soundbar

 ---

Follow the below instructions to connect the wired subwoofer to the subwoofer.

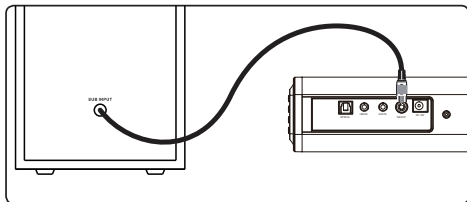

Plug the soundbar into mains sockets. Press POWER button on the unit (**Ref.4**) or the POWER button on the remote control (**Ref.11**) to switch on the unit.

Use the RCA audio cable from the subwoofer to connect to the SW.OUT jack (subwoofer out) on the soundbar.

When audio is played through any source, the bar will automatically use the connected subwoofer.

## Bluetooth Operation

---

### Pairing a Bluetooth Device for the First Time

Press the POWER button on the unit (**Ref.4**) or the POWER button on the remote control (**Ref.11**) to switch on the unit.

Select and press the INPUT button directly on the remote control (**Ref.21**) or press the SOURCE button repeatedly on the soundbar (**Ref.5**) to enter Bluetooth mode, indicated by a flashing blue light.

Using the native controls on your Bluetooth device, select the "Majority Scafell Pike II" in your Bluetooth settings to pair.

If your device requests a password, enter the default "0000". Refer to the "user manual" for your specific device for instructions on pairing and connecting Bluetooth devices.

When successfully paired and connected, a beep will issue from the unit and the Pairing Indicator will display a solid blue light. After initial pairing, the unit will stay paired unless unpaired manually by the user, or until it is erased due to a reset of the device.

If the soundbar is Bluetooth connected to a device, you can press the PAIR button for 3 seconds to exit this device in order to pair the device with another Bluetooth device.

If your device should become unpaired or you find it is unable to connect, repeat the above steps.

## Playing Audio Wirelessly

---

Follow the instructions for Pairing a Bluetooth Device.

Use the native controls on the connected Bluetooth Device to select a track.

To play, pause or skip the selected track, use the native controls on the connected Bluetooth Device.

Audio played through the connected Bluetooth device will now be heard through the speakers.

## Troubleshooting

If the Soundbar does not work properly as desired, please check the following checklist.

<b>Malfunction</b>	<b>Possible causes/measures</b>
No power / function	Check whether the power is switched on or off at the wall. Check whether the power adaptor is properly connected to power outlet or not.
No sound	Check whether unit is set to MUTE or not. Check whether MODE is correctly selected or not. Check whether cables are properly installed or not.
No sound from bluetooth connection	Check whether you have pressed PAIR button before pairing. Check whether external device requires password "0000" to start with.
Function disturbance	<b>Switches off and unplugs the unit. Leaves it for 2 minutes and switches it on again. If a particular mode is causing problems, please try an alternative connection to your TV such as Optical, AUX or Bluetooth.</b>
Remote control does not work [properly]	Check whether the battery run out or not. Replaces a new one if necessary. Check whether there is obstacle on the front of remote sensor or not.
No sound when connection and switches to OPTICAL IN mode	Check and ensures the audio setting of the input source (e.g. TV,game console,DVD player, etc.)is set to PCM mode while using digital connection (such as Optical,HDMI and COAXIAL)

## Specification

---

Power Supply	DC 18V 1.5A
Frequency Response	20Hz-20KHz
SNR	70dB
Separation	45dB
Bluetooth	V3.0
Dimension (WxHxD)	Sound bar: 81 x 6.3 x 8.7 cm Sub-woofer: 16.5 x 30.3 x 24 cm

## Warranty

---

All products come with a standard 12 month warranty. All items must be registered on [www.majorityradios.co.uk](http://www.majorityradios.co.uk) for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

# Safety Information

## 1. Read these instructions.

- Keep these instructions. Instructions are also available for download at [www.majorityradios.co.uk](http://www.majorityradios.co.uk)
- Heed all Warnings
- Follow all instructions
- Do not clean the apparatus near or with water
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during light storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
- No naked flame sources, such as lit candles, should be placed on the apparatus.
- Dispose of used electrical products and batteries safely according to your local authority and regulations.

## ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

## RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste.

Please ensure it is taken to a suitable facility for disposal when finished with.

**IMPORTANT:** Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.  
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



### ATTENTION

RISQUE D'ELECTROCUTION  
NE PAS OUVRIR



**IMPORTANT:** Please read all instructions carefully before use and keep for future reference



# MAJORITY

[www.majorityradios.co.uk](http://www.majorityradios.co.uk)