

 
# MAJORITY

---

**Majority MP3 player**

---

**16GB Black/White**

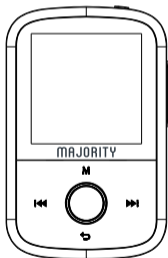

**Instructions Guide**

## CONTENTS

<b>Box Contents</b> .....	
<b>Controls &amp; Functions</b> .....	
<b>Navigation Settings</b> .....	
<b>Music</b> .....	
<b>Bluetooth</b> .....	
<b>Recordings</b> .....	
<b>Folder view</b> .....	
<b>Wallpaper</b> .....	
<b>Stopwatch</b> .....	
<b>Calendar</b> .....	
<b>Settings</b> .....	
<b>Specification</b> .....	
<b>Warranty</b> .....	

## Box Contents

 
### What in the Box.

A.Majority MP3 Player 16GB Black/White


B.Earphones

C.Type-C charging Port

D.Instructions Guide

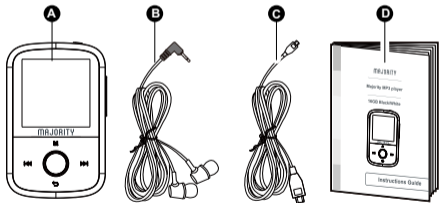

## Controls & Functions

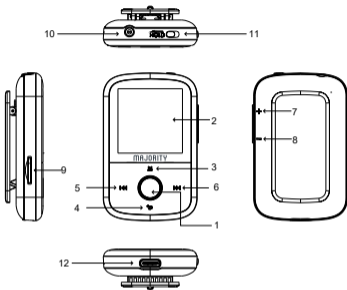 

- 1.Play/Pause/Power ON/OFF Button(Long press around for 2s)
- 2.1.54" IPS screen
- 3.Menu Button
- 4.Return
- 5.Previous menu / hold to fast backward
- 6.Next menu / hold to fast forward
7. Volume +
- 8.Volume -
- 9.Micro SD card slot
- 10.Earphone jack
- 11.Hold/Unlock
12. Type-c Charging slot

## Navigation Settings

### Power on/off

To switch on/off, press and hold for 2s the power button (Ref.1).

### Basic Operation

Before you use the player, please be noted that every time after screen turn dark, please press POWER button to light up the device then do other operations.

### Hold/Unhold

Avoid to press the buttons by mistake when no operation for player, you can toggle the hold button to the left to lock the screen . And toggle the hold button to the right to unlock the screen.

### Charging

To charge the player, it is recommended that the device is switched off first. Insert the USB power supply cable into the Type-C charging slot (**Ref.12**). You can charge the player by connecting it to your computer, or alternatively you can connect it to the mains by using a USB power adapter (not included). When connected to your computer, you can choose between 'Charge & transfer' to charge and transfer files, or 'Charge & play' to charge the device while you are using it. When the battery indicator of the device shows a low battery life, charge the device. To fully charge the device, it is recommended to charge the device for no more than 4 hours.

### File Transfer/How to add music

To transfer files (audio files) to the device, it is recommended that the device is switched off first.

1. Connect the device to your computer using the Type-c Charging cable supplied in the box.
2. Select 'Charge & transfer', and transfer your chosen files to the device. Wait

until files are completely transferred before ejecting the device.

3. Before disconnecting the USB, firstly ensure the device is safely ejected from the File Explorer options your desktop then unplug the cable. Alternatively, press the Main Menu button (**Ref.3**) to disconnect.

Compatible operating systems: Windows 7/8/8.1/10/XP/Vista/2001/Mac OS

## Music

### Play your music/adding music

To play music, select 'Music' from the main menu. To do this, navigate to 'Music' on the main menu screen, then press the enter button (**Ref.1**). Select 'All songs' from the main menu.

For how to add music, please see page 3.

### Skip track

To skip to the previous/next track, press the Previous/Next button (**Ref. 5**, **Ref. 6**).

### Fast forward/Rewind track

To rewind, press and hold down the 'Back' button (**Ref.5**). Release to resume.

To fast forward, press and hold the 'Next' button (**Ref.6**). Release to resume.

### Create a playlist

To create a playlist, select 'Music' from the main menu

#### Method 1

1. Select 'Create playlist'. Wait for the device to load the available songs.
2. Scroll through the list of available songs. Select a song to add to a playlist by pressing the 'Enter' button when the song is selected (**Ref.1**). The song will begin to play. While the song is playing, press the 'Main Menu' button (**Ref.3**).
3. Select 'Add to playlist' from the menu options, then select the playlist you would like

the song to be added to. The device will ask for confirmation. To add the song, select 'Yes'. To cancel, select 'No', or press the 'back' button (**Ref.4**). Repeat the above steps to add more songs.

## **Method 2**

1. Play a song by selecting it from the list.
2. Press the 'Menu' button (**Ref.3**).
3. Select 'Add to playlist', then choose the playlist you would like the song to be added to.

## **Main menu options**

**All songs**-select to view a list of all songs

**Resume**-select to continue to play the song

**Artists**-select to view music by artist

**Albums**-select to view music by album

**Genres**-select to view music by genre

**Playlists**-select to play a playlist

**Create playlist**-select to begin creating a playlist (up to 100 songs)

## **Repeat a song or Shuffle all songs**

While playing a song, press the 'Menu' button (**Ref.3**). then 'Repeat'. Select your chosen play mode from the options. Select 'repeat 1' to repeat the song currently playing. Select 'Repeat all' to repeat the playlist currently playing.

While playing a song, press the 'Menu' button (**Ref.3**). then 'shuffle'. Select 'off' or 'On' according to your requirement.

## **Song options**

**Repeat**-repeat a song or playlist

**Shuffle**-choose shuffle off or on

**Repeat settings**-select Repeat Mode/Replay Interval/Replay times

**Sound settings**-select Variable Speed Playback/Volume limit/Equalizer

**Add to playlist**-add a song to a playlist.

**Remove from playlist**-remove the song currently playing from the playlist

**Delete**-delete a song from the device

**Bookmarks**-save a song 'bookmark' (save a song time, to start a song from that specific point). Once selected, the 'bookmark' will be available under the 'Go to bookmark' option.

## View the lyrics of song

While playing a song, press and hold for 2s the 'Menu' button (**Ref.3**), you can view the lyrics of the song if uploaded the lyrics of song into the device already.

# Bluetooth

## Connect to a Bluetooth speaker

To connect the player to a Bluetooth speaker or sound output device, follow the steps below:

1. Select 'Bluetooth' from the main menu.
2. Select 'Bluetooth switch control' from the Bluetooth menu.
3. Select 'Bluetooth open' from the options using the Enter button (**Ref.1**).
4. Press 'Back' button (**Ref.4**) to exit.
5. Select ' Search for device', Wait for the player to search for and display a list of available

## Bluetooth devices.

Select your device from the list, and wait for the connection to be established. You can now play music and other audio through your chosen sound output device

## Options

**Bluetooth switch control**-switch Bluetooth on or off.

**Search for device** - search for available Bluetooth devices.

**Device List** - view a list of previously connected devices.



## Recordings

### Create a voice recording

1. To create a voice recording, follow these steps:
2. Select 'Start voice recording'
3. The device will begin to record by using the built-in microphone
4. Once you have finished your recording, press the 'Enter' button to pause/stop (Ref.1). Press the 'Back' button then select 'Yes' or 'No' to save or delete the recording.

### Options

**Start voice recording**-select to begin a voice recording.

**Record format** -select to choose the format of your recordings (MP3 file or WAV file).

**Record Settings**-select to choose the recorder settings. Bitrate settings enable you to change the recording bitrate between 512, 768, 1024, and 1536kbps (Kilobits per second). VOX-mode refers to voice mode. When VOX mode is switched on, the device will only record when the microphone detects a voice, and pause when it does not detect a voice.

**Recordings library**-select to view a list of your recordings

## Folder view & Wallpaper

### Folder view

View all files

Select 'Folder view' from the main menu to view a list of all files on the device (audio files). The device name will display on your computer as 'MajorityMP3'.

## Wallpaper

Select 'wallpaper' from the main menu, press Enter button (Ref.1) to enter, and press Enter button (Ref.1) switch the wallpaper. (there are six wallpapers).

## Stopwatch & Calendar

### Stopwatch

- 1.Select 'stopwatch' from the main menu.
- 2.press Enter button (Ref.1) to enter
- 3.press Enter button (Ref.1) to start/pause
- 4.Press the 'Menu' button (Ref.3) reset the data.

### Calendar

- 1.Select 'Calendar' from the main menu
- 2.press Enter button (Ref.1) to enter, can view the date
- 3.Press the 'Menu' button (Ref.3) to switch the year/month/day

## Settings

To view and change the main device settings, select 'Settings' from the main menu.

**Language** - select to change the device language. Choose from a list of 30 languages.

**Display settings** - select to change the screen brightness, Backlight timer and screensaver

**Sleep timer** - select to choose the Sleep timer and Auto Turn Off settings.

**Power Off Timer** - select to choose no action and Auto Turn Off settings.

**Date and time** - select Time settings and Date settings

**Information** - select to view information on the Firmware and remaining Disk space of the device.

**Factory settings** - select to restore the device to factory settings.

**Format device** - select to format the device and delete all data and files.

### **Forced Reset:**

If the MP3 player stops responding, perform a forced reset. To force a hard reset, please insert a pin or paper clip end into the reset hole. The reset hole is located in the side of the unit next to the volume button.

## **Specification**

Screen	1.54 inch 240*240 IPS screen
Flash Memory	16GB
Bluetooth Version	Bluetooth 5.0
Recording Format	MP3 Rec/ WAV Rec
Battery	Li-polymer rechargeable 300mAh
Micro-SD card	Compatible with SD cards up to 128GB
Charging time	3 hours

## Warranty

Register your Majority product within 30 days of purchase to activate your extended 3 Year Warranty. Gain access to all the benefits and lifetime technical support (see our Extended Warranty details for more info).