

ATLAS

USER MANUAL



MAJORITY

HOME AUDIO • CAMBRIDGE

 
Contents	2
Box Contents	3
Controls & Functions	4
Setting up your Majority Atlas	6
Bluetooth, SD & USB Controls.....	7
Bluetooth Mode	8
USB & SD Card Mode.....	9
AUX mode.....	10
Troubleshooting	11
Spec & Warranty	12
Safety Information.....	13

3 | **YEAR
WARRANTY**


Register your product online for a FREE 3 year
extended warranty at: www.majority.co.uk

WHAT'S IN THE BOX

- A. Majority Atlas PC Soundbar
- B. Power Adapter
- C. 3.5mm to 3.5mm AUX cable
- D. Instructions Guide

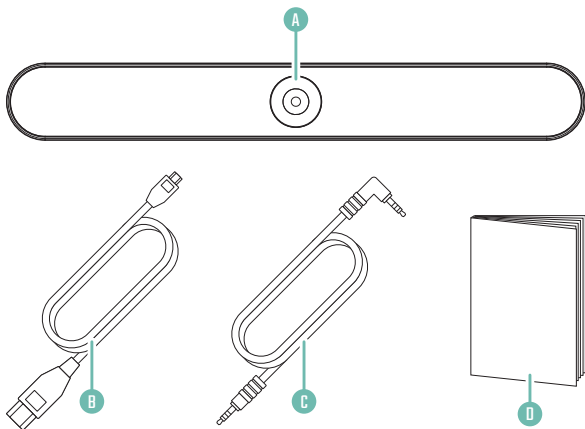


TOP VIEW

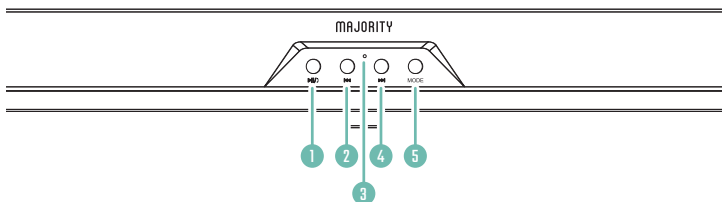 


1. Play/Pause
2. Previous/Rewind
3. Indicator light
4. Next/Fast forward
5. Mode

 FRONT VIEW

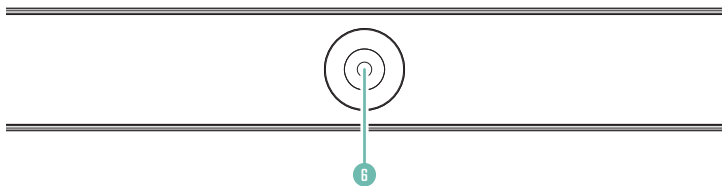

6. On/Off/Volume

 BACK VIEW

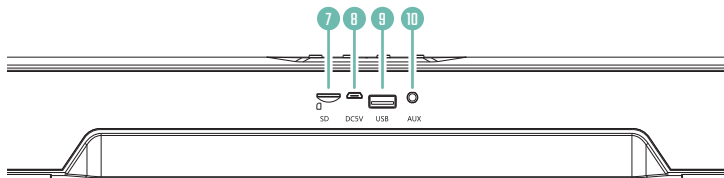

7. SD card slot

8. DC 5V power input

9. USB slot

10. AUX input

Please note that the instructions in this manual will refer to the soundbar button number e.g (Ref.*number*) in accordance with the diagrams on pages 2-3.

Connecting and powering the unit

Using the USB to Mini USB power cord provided, plug the mini USB connector into the back of the unit (Ref.8) and plug the other end into a USB power supply (mains adaptor or other USB power supply).

Rechargeable Battery

When the unit is not fully charged, the indicator light (Ref.3) will display as red. When the unit has reached full power, the red light will disappear.

Switch on your Majority Atlas Soundbar

Switch the unit on by rotating the On/Off/Volume dial clockwise until the dial clicks into place and the soundbar is powered on (Ref.6). To switch the unit off, rotate the dial (Ref.6) anti-clockwise until the dial will not rotate any further.

Basic operations

Use the On/Off/Volume dial (Ref.6) to switch the unit on or off and change the volume.

In Bluetooth, SD, or USB mode, use the ▶|| button to play or pause a track, and use the ◀▶ (Ref.2)/(Ref.4) buttons to skip tracks or fast forward/rewind (press and hold to rewind or fast forward) (see page 5).

Press the 'MODE' button (Ref.5) to change modes between SD card, Bluetooth, AUX and USB mode.

Please note that the following controls and functions relate to Bluetooth, SD card and USB mode only. For AUX controls and functions, please see the section titled 'AUX Mode' (page 10).

Note: in the table below, (H) = 'Press and hold'.

Soundbar button	Function	Reference
I◀◀ ▶▶I	Previous/next track	(Ref.2)/(Ref.4)
(H) I◀◀ ▶▶I	Rewind/Fast forward	(Ref.2)/(Ref.4)
▶II	Play/Pause	(Ref.1)
MODE	Change mode	(Ref.5)
On/Off/Volume Dial	Power On/Off/Vol- ume+/-	(Ref.6)

Connecting a Bluetooth device

To connect an external device to the Atlas soundbar, ensure that the soundbar is in 'Bluetooth' mode. Select 'Bluetooth' mode manually by using the 'MODE' button (**Ref.5**).

The soundbar will sound with the phrase 'Bluetooth' to indicate that Bluetooth mode is now active.

The soundbar indicator light (**Ref.3**) will flash until successfully connected to a Bluetooth device.

Switch Bluetooth on for your external device. Select 'Majority Atlas' from the list of devices.

When connected, the indicator light (**Ref.3**) will remain static blue.

When your external device is connected, the soundbar will sound with the phrase 'Bluetooth Connected' to indicate successful connection. You can now play audio through the speakers. When disconnected, the soundbar will sound with the phrase 'Bluetooth Disconnected'.

If the unit is switched to a different mode while Bluetooth is connected, Bluetooth will automatically be disconnected.

Controls and Functions

Please see **page 5**.

USB and SD Card

When a USB or SD card is inserted, the unit will automatically switch to the correct mode and begin playing audio. If necessary, select 'USB' or 'SD' mode using the 'MODE' button (**Ref.5**).

USB

Insert a USB drive into the USB port at the back of the unit (**Ref.9**). When USB mode is selected, the soundbar will sound with the phrase 'USB'.

Maximum compatible storage: 64GB.

Micro SD card

Insert a micro SD card into the 'SD' port at the back of the unit (**Ref.7**). When SD card mode is selected, the soundbar will sound with the phrase 'Memory Card'.

Maximum compatible storage: 64GB.

Controls and Functions

Please see **page 5**.

Use the included 3.5mm to 3.5mm AUX cable to connect an external device to the 'AUX' input of the Majority Atlas (**Ref.10**).

Switch to AUX mode

When an AUX cable is plugged in to the AUX port at the rear of the speaker (**Ref.10**), the unit will automatically switch to AUX mode (indicated with the phrase 'Line in'). If necessary, select 'AUX' mode using the 'Mode' button (**Ref.5**).

Controls and Functions - AUX

Soundbar button	Function	Reference
▶	Play/Pause	(Ref.1)
MODE	Change mode	(Ref.5)
On/Off/Volume Dial	Power On/Off/Vol- ume+/-	(Ref.6)

Observation	Potential Cause/Solution
No power/function	Check whether the power is switched on or off at the wall. Check that the power adaptor is properly connected to the power outlet.
No sound	Check whether MODE is correctly selected. If you are connected via Bluetooth or AUX, turn up the volume on your device.
Function disturbance	Switch off and unplug the unit. Leave it for 2 minutes and switch it on again.
Bluetooth not connecting	Ensure that the soundbar is in Bluetooth mode and the Bluetooth on your device is switched on. Select the Bluetooth device 'Majority Atlas' and you should now be able to play audio.

SUPPORT

If you require further assistance with your new soundbar, please contact our support team on the Majority website: www.majority.co.uk/support

SPECIFICATION

Power Supply	DC 5V
Mode:	Bluetooth 3.5mm AUX-in USB reader SD card reader
Power consumption	20W (working)
Dimensions	45 x 6 x 5 cm
Weight	0.80 kg
Speakers	2*2" full range + 2 diaphragm
Bluetooth Version	5.0
Bluetooth range	up to 10 meters
Compatible file types	MP3, WMA, FLAC, MAV, APE
Maximum compatible USB/SD storage	64GB
FCC ID	2AHRPBR-30

WARRANTY

All products come with a standard 12 month warranty. All items must be registered on www.majority.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at www.majority.co.uk
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste.

Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.

Do not open



Read all instructions carefully before use

and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

MAJORITY

WWW.MAJORITY.CO.UK