

MAJORITY

---

**D X 2 0**

---

PC Speakers



Instructions Guide

# Contents


<b>Controls And Functions</b> .....	<b>1-3</b>
<b>What's In The Box?</b> .....	<b>4</b>
Mode And Parameters .....	5
Using the USB Input .....	6
Using the TF Input .....	7
Using the MP3 LINK Connection (AUX In) .....	8
Connecting to the Mains Supply .....	9
Bluetooth Operation .....	10
<b>Troubleshooting</b> .....	<b>11</b>
<b>Support And Warranty</b> .....	<b>12</b>
<b>Safety Information</b> .....	<b>13</b>

**3**

**YEAR  
WARRANTY**

Register your product online for a FREE 3 year  
extended warranty at: [www.majority.co.uk](http://www.majority.co.uk)


## Back View

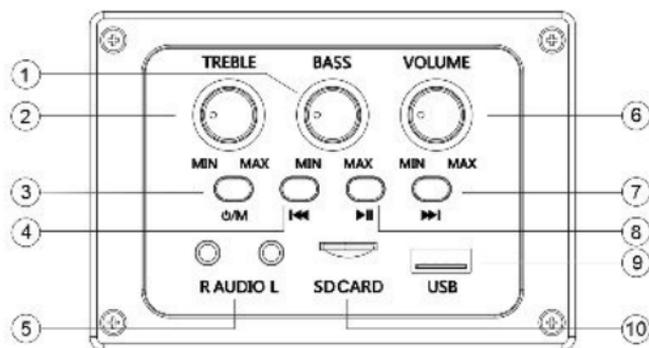

1. BASS Volume
2. TRBLE Volume
3. Power/Mode
4. Prev
5. L&R Speaker

6. Main Volume
7. Next
8. Play/Pause
9. USB
10. SD Card

## Desktop Control Buttons

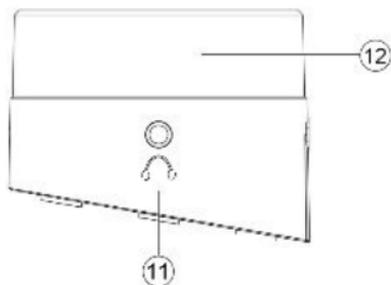

11. Earphones

12. Mode&MAIN Volume

## Controls And Functions

Button	Operate	Action	Function
<b>TREBLE</b>	Rotate	Clockwise Rotation	Increase the treble volume
		Anti-clockwise Rotation	Reduce the treble volume
<b>BASS</b>	Rotate	Clockwise Rotation	Increase the treble volume
		Anti-clockwise Rotation	Reduce the treble volume
<b>VOLUME</b>	Rotate	Clockwise Rotation	Increase the treble volume
		Anti-clockwise Rotation	Reduce the treble volume

Button	Operate	Function
	Short Press	BT => AUX => USB => TF
	Long Press	Power On
		Power Off
	Short Press	Bluetooth / USB / SD card function: Paused
	Press	Last song: PREV
	Press	Next song: NEXT

## Controls And Functions

Desktop Control	Operate	Action	Function
	Rotate	Clockwise Rotation	Increase the main volume
		Anti-clockwise Rotation	Reduce the main volume
	Short Press	Short Press	BT => USB => SD => AUX
	Insert Earphones	Insert Earphones	External headsets play.

Name	Specification Function
AUDIO Port	Left and Right Speaker Output
SD Port	MP3
USB Port	MP3

# What's In The Box

## Box Contents

---

1.Subwoofer x1


2.Left Speaker x 1

3.Right Speaker x 1

4.Desktop Control x1

5.Instructions x 1

1

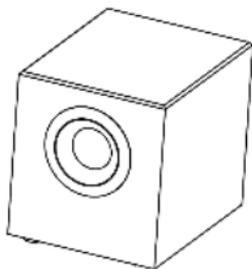


2



3



4

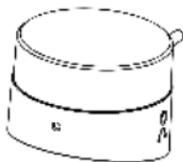

5



## Mode Indicator Lights


State	Indicator Lights	Product Function Prompt Sound
Bluetooth ready	Flashing blue	Bluetooth Mode
Bluetooth connected	Blue	/
Aux-In Mode	Purple	AUX Mode
USB Mode	Purple	USB Mode
SD Card Mode	Purple	Play by TF Card

## Specifications

<b>Power Input</b>	DC 5V
<b>RMS</b>	2*3W+5W
<b>Bluetooth</b>	V5.0
<b>Dimension (WxHxD)</b>	10*10*17.6CM (Left and Right Speaker) 18.2*16.8*21CM ( Wooden Case)


## Using the USB Input

1. Insert your USB drive/stick into the USB port that can be found on the back of the subwoofer
2. Press POWER/MODE button on the subwoofer to change the DX20 into USB mode. The mode LED light indicator will turn Purple .
3. Once all set-up, music from USB drive/stick will automatically start to play.

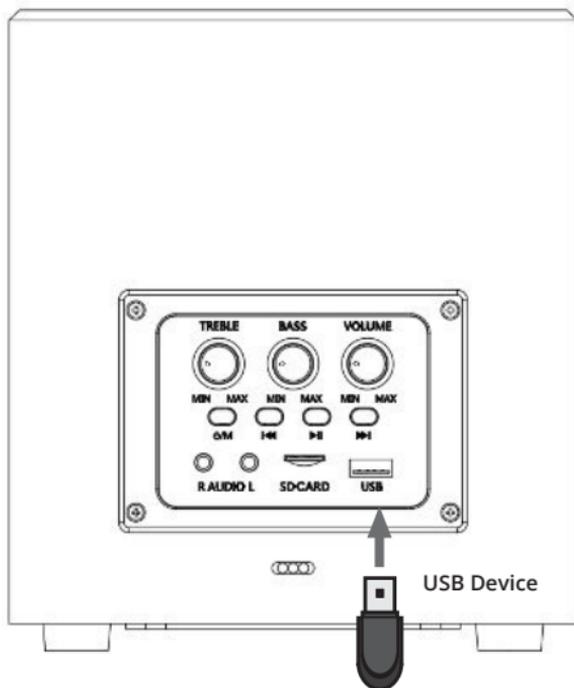


## Using the TF Input

1. Insert your TF Card into the SD Card port on the subwoofer.
2. Press the POWER/ MODE button on the subwoofer to change the mode for SD card. The mode LED light indicator will turn Purple.
3. Once all set-up, music from SD/TF card will automatically start to play.

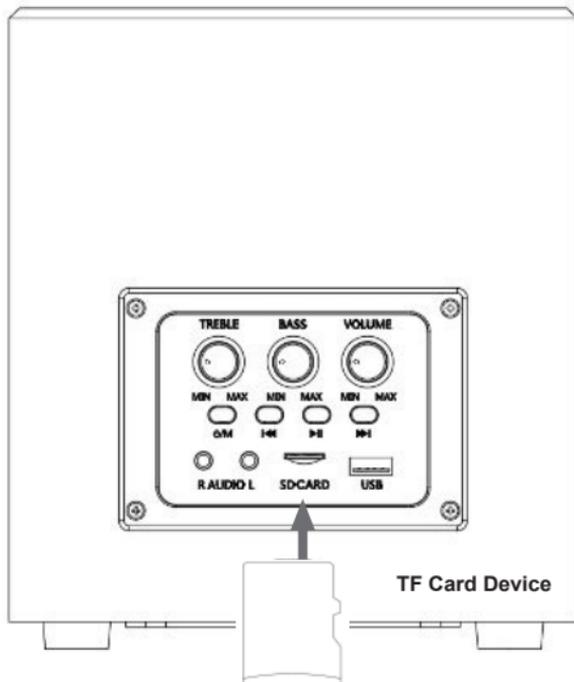

## Using the MP3 Connection (AUX-In)

1. Plug the other end of the AUX cable into audio output/headphone jack on your MP3 player or other audio device.
2. Press the POWER/MODE button to change the mode into Line-in. The mode LED light indicator will turn Purple.
3. Once all set-up, you can play audio from your MP3 player or other audio device.

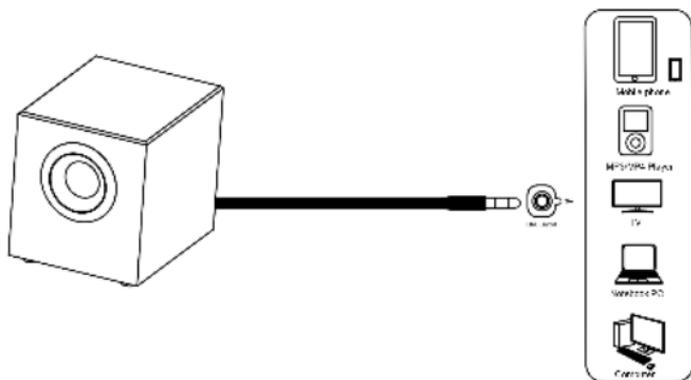

## Connecting to the Mains Supply

Ensure that the power supply voltage is within the range of 100V-240V.

This unit is designed to use a power adapter or USB port.


Unwind the mains cable to its full length.

Connect the mains plug to a mains socket.

Make sure the mains plug is fully inserted into the mains socket.

Connect the adapter to the unit via the DC Input socket.

(DC-5V-IN)

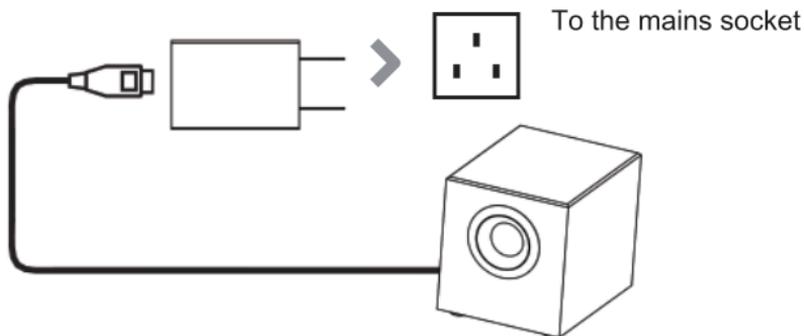

Ensure all audio cables are properly connected before inserting the power cable into the mains socket.

Unplug the power cord from the outlet when the unit is not in use for an extended period of time.

## Bluetooth Operation

a beep will be heard

### Pairing a Bluetooth Device for the First Time


Select and press POWER/MODE button on the Subwoofer until Bluetooth mode is selected, indicated by a flashing blue light.

Using the native controls on your Bluetooth device, select the “Majority DX20” when prompted to choose a Bluetooth device.

When successfully paired and connected, a beep will be heard from the unit and the Pairing Indicator will display a solid blue light. After initial pairing, the unit will stay paired unless unpaired manually by the user, or until the device is reset.

To unpair, hold down the PAIR button for 3 seconds. You can now pair the device with another Bluetooth device.

In case your device will disconnect from DX20, or if you are unable to connect please start over again following the pairing steps again.

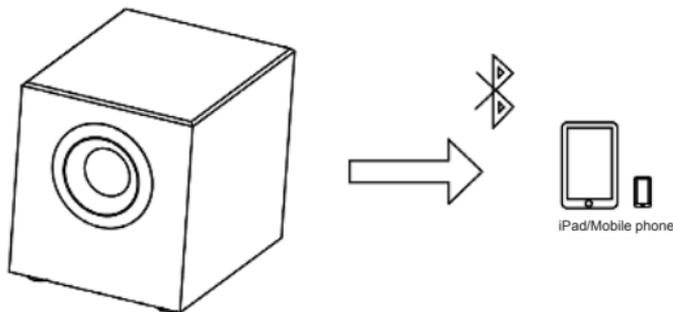

If you encounter an issue with your DX20, please refer to the following checklist.

Issue	Possible Cause	Solution
Bluetooth does not connect / could not find Bluetooth device.	1. Speakers are already paired to another Bluetooth device. Product or phone Bluetooth has not updated scanned.	1. Make sure that the DX20 is not already connected to other devices via Bluetooth when trying to perform a Bluetooth search/connection. 2. If you are having issues connecting via Bluetooth, try turning off the product and leave it switched off for 15 seconds, then right after power on the device and search for a Bluetooth connection. To do this please switch the DX20 into Bluetooth Mode and try to connect to a new device.
Doesn't read USB stick.	1. Check if there are music files in the USB and the music format. 2. Check if the USB is damaged.	1. Verify that the USB has a music file and can be reinserted. 2. Replace with a new USB stick.
Doesn't read SD cards.	1. Check if there are music files in the SD card and if the music format is supported. 2. Check whether the SD card is damaged.	1. Verify that the SD card has a music file and can be re-inserted. 2. Replace with a new SD card.
AUX-IN: No sound on Line-In Mode	1. Check whether the 3.5mm LINE-IN cable is good quality	1. Retest with new lines. 2. Re-plug the line.

### Support

---

If you require further assistance with your new DX20 PC Speakers, please contact our support team on the Majority website:

[www.majority.co.uk/support](http://www.majority.co.uk/support)

### Warranty

---

Register your product at [www.majority.co.uk](http://www.majority.co.uk) within 30 days of purchase to activate your extended warranty. Terms and conditions applies.

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at [www.majority.co.uk](http://www.majority.co.uk)
3. Heed all warnings.
4. Follow all instructions.
5. Do not clean the apparatus near or with water 6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions 7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 8. Protect the power from being walked on or pinched

particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

## ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.



## RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.



**IMPORTANT:** Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.  
Do not open



Read all instructions carefully before use and keep for future reference

When servicing, use only identical replacement parts



**CAUTION**

RISK OF ELECTRIC SHOCK DO NOT OPEN



**CAUTION**

RISK OF ELECTRIC SHOCK DO NOT OPEN



**IMPORTANT:** Please read all instructions carefully before use and keep for future reference.



**MAJORITY**

[www.majority.co.uk](http://www.majority.co.uk)