


Contents

- What's in the Box?1
- Controls and Functions2
- Mode Indicator Lights4
- Bluetooth Operation5
- Troubleshooting6
- Specifications7
- Support8
- Warranty8
- Safety Information9

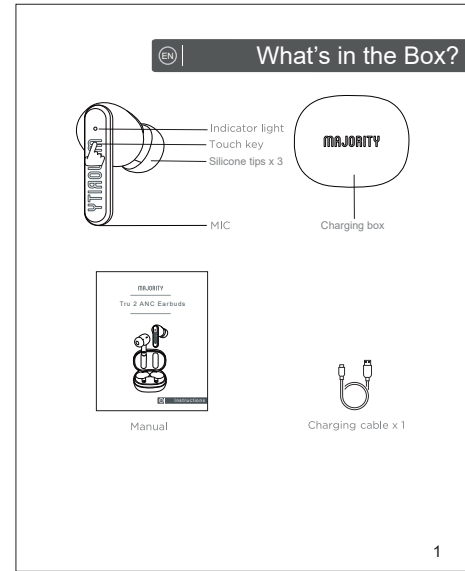

Controls and Functions

■ The operation of the touch key

Volume

■ Left/Right Earbuds Operation

- Pause / Play: click (left / right) to touch the function key
- Previous song / next song: double click the left ear to touch the function key previous song. Double click the right ear to touch the function key for the next song.

Call Mode

■ Left/Right Earbuds Operation

- Answer Call: click on any earbuds.
- End Call: double click any earbuds.
- Reject Incoming Calls: double click any earbuds.

Controls and Functions

■ Left/Right Earbuds Operation

- Turn on the voice assistant: three clicks on any touch function key to wake up the voice assistant.
- Noise Reduction Control: Long press any touch function key for 2 seconds to switch the noise reduction mode.
- Noise Reduction Mode switching: Long press the time to reach 2 seconds to prompt. (prompt tone.wav) switch to the Noise Reduction Mode after letting go and play the prompt tone (transparent/ANC ON/ANC OFF.wav)

Mode Indicator Lights

Earbuds	Put the earbuds in the charging box and the earbuds will charge automatically	Pairing status: The white light in the right ear flashes once in 0.5 seconds, and the light in the left ear goes out.Connected light off. State of charge: During charging, the white light stays on and the full light goes out. Low power state:The white light flashes twice every 20 seconds.
Charging case	To charge the case use a type-c cable and 5v adapter	Charging: White light flashes. Charging completed: The white light is always on. The charging box charges the earbuds: The power is 10% ~ 100%: the white light is on for 4 seconds and is off The power is 10% ~ 1%: The white light flashes for 1 second and then goes out after 4 seconds.

Bluetooth Operation

• Turn on
Method 1 : Open the charging case cover.
Method 2 : Press and hold the touch key for about 1.5 seconds in the off state.

• Turn off
Method 1: Put in the charging box and close the cover.
Method 2: Press and hold the touch key for 5 seconds in the power-on state.
Method 3: Automatic shutdown after 2 minutes without connection.
Remark: Turn off one side and the other side will shutdown.

• Pair
Open the charging box, turn on the earphones and the left and right earbuds will automatically reconnect. After reconnection, the right earbuds will enter the pairing state, the white light will flash once every 0.5 seconds, and the left earbuds will be off. Click and select the corresponding headset name in the Bluetooth list to connect.

Troubleshooting

- Earbuds cannot be switched on. Please check whether the earbuds are powered on if they are not please charge them and turn on again.
- Bluetooth pairing failed. Make sure that the earbuds are powered on and in the case ready for pairing connection and the pairing distance is kept within 1m.
- Automatic Loop-back After power on, the last paired connected mobile phone will be automatically connected back
- How long will it turn off automatically if it is turned on and not connected? After the earbuds is turned on, if no other Bluetooth device is connected, it will automatically turn off after 2 minutes.

Specifications

Transmission distance: > 10M
Battery capacity: 40mAh
Playing time: about 5-6 hours (earbuds)
Charging time: about 1.5 hours (earbuds)
Rated input: 5V=45mA
Battery capacity: 350 mAh
Charging time: about 1.5 hours
Rated input: 5V = 350 mA
(All technical information is subject to actual performance)

Charging the box

Charging status: White light flashing
Charge complete: The white light stays on
When the charging box is low, the white light flashes.

Specifications

Support

If you require further assistance with your new earbuds, please contact our support team on the Majority website: www.majority.co.uk/support.

Warranty

All products come with a standard 12-month warranty. All items must be registered on www.majority.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24-months, free of charge.

Safety information

- Read these instructions.
- Keep these instructions. Instructions are also available for download at www.majority.co.uk.
- Heed all warnings.
- Follow all instructions.
- Do not clean the apparatus near or with water.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during light storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
- No naked flame sources, such as lit candles, should be placed on the apparatus.
- Dispose of used electrical products and batteries safely according to your local authority and regulations.

RECYCLING ELECTRICAL PRODUCTS
You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.

Risk of electric shock.
Do not open.
Read all instructions carefully before use and keep for future reference.
When servicing, use only identical replacement parts.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.

