

P300

User Manual

MAJORITY

HOME AUDIO • CAMBRIDGE

 
 
 
Contents	2
Box Contents	3
Controls & Functions.....	4
Controls & Functions.....	5
Setting Up Your P300 Speaker	6
Basic Operation.....	7
Bluetooth, USB & SD Controls.....	8
FM Radio, Mic & Recording Controls	9
Troubleshooting	10
Spec & Warranty	11
Safety Information	12

3 year
Warranty


Register your product online for a FREE 3-year
extended warranty at: www.majority.co.uk

What's in the Box

- A. Majority P300 Party Speaker
- B. Microphone
- C. User Manual
- D. Remote Control (Batteries Included)
- E. Power Adaptor

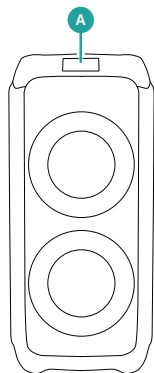


Top View

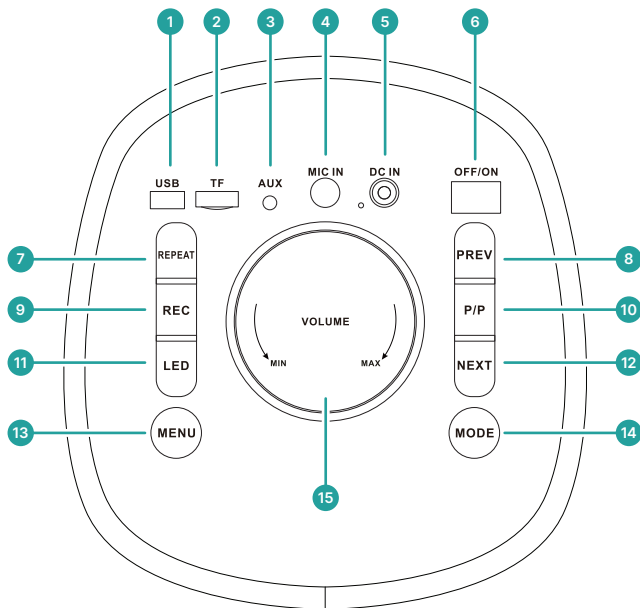 

1. USB Port
2. SD Card Slot
3. 3.5mm AUX Port
4. Microphone Port
5. Power Port
6. Power Off/On
7. Repeat Track
8. Previous Track
9. Record
10. Pause/Play
11. LED Light Mode Change
12. Next Track
13. Menu for Bass / Treble / Mic Adjustments
14. Mode Select (Bluetooth / USB / SD Card / AUX / FM Radio)

 Remote Control

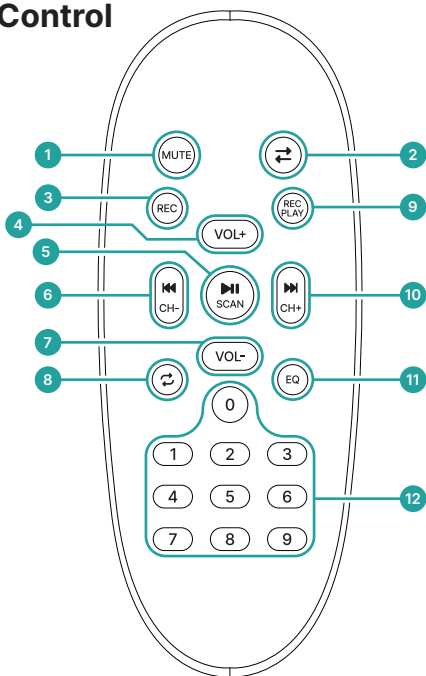

- | | |
|---|---|
| 1. Mute | 8. Repeat Mode (One/All) |
| 2. Change Mode | 9. Play Mic Recordings |
| 3. Record Mic Audio to USB / SD Card | 10. Next Track / Scan |
| 4. Increase Volume | 11. EQ Mode (Rock / Pop / Jazz, Classical / Flat) |
| 5. Play/Pause on Bluetooth / USB Mode / Auto-Scan for FM Mode | 12. 0-9 Number Keys for USB / SD Card Track Select and FM Presets |
| 6. Previous Track / Scan | |
| 7. Decrease Volume | |

Charging

The unit will charge in standby and working mode if it is connected to the mains with the supplied power adaptor. To confirm that the unit is on charge, the charging icon (at the top right of the screen) will indicate the unit is charging and the level of charge. The charging port will also display a red light to indicate charging.

The speaker will take approximately 4 hours to fully charge, when fully charged the charging port will display a green light.

Play Time

The P300 has an internal rechargeable battery that has a playtime of 8 hours when fully charged. This will allow you to remove the power adaptor and take the speaker on the go and use it portably.

Remote Control Power

Remove the battery cover of the remote control. Insert 2 x AAA batteries (included). Replace battery cover.

Note: When using the remote control, ensure that you are pointing at the remote sensor, otherwise the unit may not respond.

Basic Controls

On the remote control or top panel of the speaker, use the **Vol+** & **Vol-** buttons or volume dial to control the volume.

Press **MUTE** to mute the audio.

In Bluetooth or USB mode, use the **⏮** & **⏭** buttons to skip tracks and rewind or fast forward.

Switching Mode

Select the correct mode using the **MODE** option button on the remote control or top panel of the speaker.

The mode selected is indicated on the LED display on the front of the main speaker:

- **AUX**
- **Bluetooth**
- **FM**

Bluetooth

To choose Bluetooth Mode, press the **MODE** button on the remote or top panel until Bluetooth Mode is selected.

Go to the Bluetooth settings on your chosen device and ensure Bluetooth is switched on. Locate "Majority P300" in your available devices and select the device to connect. Once connected, the voice prompt will confirm 'Bluetooth Connected'.

To choose the music you wish to play, you will need to choose the song, album or playlist from your device.

Note: The speaker only receives Bluetooth input from certain devices such as a phones or tablets.

USB

To choose USB Mode, press the **MODE** button on the remote or top panel until USB Mode is selected.

Insert a USB stick/drive into the USB port and use the remote control functions to play, pause and navigate through files.

Note: The USB port **cannot** be used as a connection port with other devices. This port is only to be used for playback from a USB stick or recording.

SD Card

To choose SD Card Mode, press the **MODE** button on the remote or top panel until SD Card Mode is selected.

Insert an SD Card into the SD port and use the remote control functions to play, pause and navigate through files.

FM Radio

To choose FM Mode, press the **MODE** button on the remote or top panel until FM Radio Mode is selected.

Playback will autoplay the last played station. Press **Play/Pause** button on the remote control or top panel to auto-scan. The device will then auto-scan for a confirmed FM signal and save the station as preset 1-9. When complete, the device will then play preset 1. Use the preset buttons on the remote control, or next/previous track/scan to choose between preset stations.

Microphone

Plug in the supplied wired microphone and the speaker will automatically recognise the connection. Ensure the microphone is switched to **ON**.

Control the volume and echo of the microphone via the controls on the speaker's top panel. The LED display will show the volume and echo level selected.

The microphone audio works independently of the main speaker audio, so the microphone can be used with any playback mode.

Recording Controls

The record function is used to record the audio from the microphone when the wired mic is connected. It records to USB or SD card, so either of these ports needs to have a USB stick or SD card connected with free space to save recordings. The recording saves in .mp3 format and a maximum of 4GB file size can be saved.

Note: The recording **only** save the audio from the microphone and not any audio played through other playback options.

To activate a recording, press the **REC** button on the remote control or top panel of the speaker and the recording will start.

To stop the recording, press the **REC** button again.

To play a saved recording, press the **REC PLAY** button on the remote control.

Observation	Potential Cause/Solution
No Power/Function	<p>Check whether the power is switched on or off at the wall.</p> <p>Check that the power adaptor is properly connected to the power outlet.</p>
No Sound	<p>Check whether unit is set to MUTE.</p> <p>Check whether MODE is correctly selected.</p> <p>Turn up the volume on the speakers or on your external device.</p> <p>Check that cables are properly installed.</p>
Function disturbance	<p>Switch off and unplug the unit. Leave it for 2 minutes and switch it on again.</p>
Bluetooth not connecting	<p>Ensure that you are on Bluetooth mode on the speaker and the Bluetooth on your device is switched on. Select the Bluetooth device 'Majority P300' and you should now be able to play audio.</p>

Support

If you require further assistance with your Majority product, please contact our support team on the Majority website: www.majority.co.uk/support

Specification

Power Supply	100-240V/50-60Hz
Mode:	Bluetooth 3.5mm AUX-in USB reader SD reader FM Radio
Power consumption	0.5W (Standby Mode)
Dimensions	260 × 245 × 555 mm
Weight	4.40 kg
Speakers	2*4" full range + 2 * 1" tweeter
Bluetooth Version	5.0
Bluetooth range	Up to 10 metres
Compatible file types	MP3, WMA, FLAC, MAV, APE
Maximum compatible USB/SD storage	64GB

Warranty

All products come with a standard 12 month warranty. All items must be registered on **www.majority.co.uk** for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at www.majority.co.uk
3. Heed all Warnings.
4. Follow all instructions.
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.

Do not open.



Read all instructions carefully before use and keep for future reference.



When servicing, use only identical replacement parts.



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference.



MAJORITY

www.majority.co.uk