

Specifications

Bluetooth Version	Bluetooth V5.3+EDR
Bluetooth profiles	HSP/HFP/A2DP/MRCP
Effective range	10 meters
Working time	Music: up to 6H Talk ing: up to 6H
Standby time	Up to 200H
Input	DC5V/450mA
Charging time	Approx 1H
Weight (single earbud)	4.5g

Support

If you require further assistance with your new TWS, please contact our support team on the Majority website:
www.majority.co.uk/support

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majority.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

Safety Information

- Read these instructions.
- Keep these instructions. Instructions are also available for download at www.majority.co.uk
- Heed all warnings
- Follow all instructions
- Do not clean the apparatus near or with water
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during light storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
- No naked flame sources, such as lit candles, should be placed on the apparatus.
- Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS
The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.
Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.
Battery shall not be exposed to excessive heat such as sunshine, fire or the like.


RECYCLING ELECTRICAL PRODUCTS
You should now recycle your waste electrical goods and in doing so help the environment.
This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.

Risk of electric shock. Do not open

Read all instructions carefully before use and keep for future reference

When servicing, use only identical replacement parts

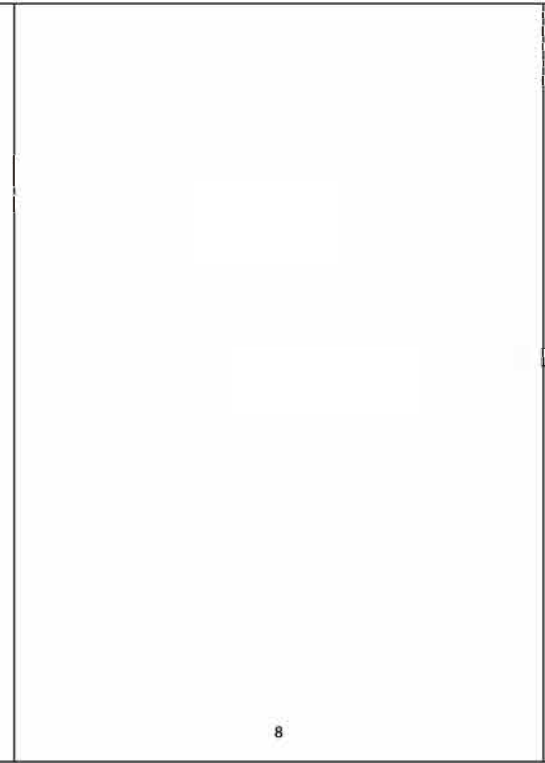

MAJORITY

MAJORITY TRU BIO EARBUDS

Instructions Guide

Contents

What's In The Box? 2
 Controls 3
 Instructions Guide 4
 Specifications 6
 Warranty Safety 7

3 YEAR WARRANTY Register your product online for a FREE 3 year extended warranty at: www.majority.co.uk

What's In The Box?

Box Contents

A: Majority Tru Bio Earbuds
 B: Charging cable- USB Type C
 C: Instructions Guide
 D: 3 X eartips

Overview

1. Mic
 2. LED
 3. MFB (Multi-function button)
 4. Pogo pins
 5. LED for power indicator
 6. Type-c charging port

Instructions Guide

Functions

Power on
 Method 1: Take earbuds out from the charging case, they will auto power on.
 Method 2: Hold MFB for 2 seconds. Red and Blue LED flick alternately.

Power off
 Method 1: Put earbuds back into the charging case, they will power off.
 Method 2: Hold MFB for 5 seconds. Red LED flickers 3 times and then powers off.

Reject call
 Hold MFB for 2 seconds.

Answer call
 Tap MFB to incoming call and tap again to end it.

Play/pause
 When standby in stereo mode, tap MFB to play and tap again to pause.

Skip track forward/backward
 When playing, double tap MFB on left/right earbud to skip track forward/backward.

Volume up/down
 When playing/calling, hold MFB for 2 seconds on left/right earbud to Volume up / Volume down.

Charge the earbuds
 Insert the earphones into charging case (pogo pins should be well-connected). Red Led will be on when charging, after being fully charged, Red Led will be off.

Charge the case
 Please charge the case via USB type-c cable.
 When battery level is less than 25%, four white LED will flicker.
 When battery level is more than 25%, less than 50%, one white LED is on, other three LEDs flicker.
 When battery level is more than 50%, less than 75%, two white LED is on, other two LEDs flicker.
 When battery level is more than 75%, less than 100%, three white LED is on, last one LEDs flicker.
 When fully charged, four white LED are all on.

Instructions Guide

For first time Using

Please tear off protective film on pogo pins of earphones before using, then put earphone back into charging box to active the earphones.

How to pair

Take out of both earbuds from Charging case, they will auto power on and pair with each other.
 Left earbud will auto enter pairing mode when blue and red LED blink alternately. On cellphone, Search for "Majority Tru Bio" and connect cellphone with both earbuds.

Tips

- Before using the TWS earbuds, please read the manual carefully and keep it for future references.
- The TWS earbuds need to be fully charged prior first-time use.
- If the TWS earbuds left unused for more than 2 weeks, please recharge it periodically.
- Please use the chargers made by qualified manufacturer.
- When TWS power on, don't connect with any bluetooth device, or disconnect with bluetooth device for about 3 minutes, TWS will power off.
- When hear warning voice, it means battery is low power and need to be charged.
- If the two earphones fail to pair and connect, before earphone pair and connect with any bluetooth device, press MFB of L earphone three times continuously and quickly, the two earphones will pair and connect with each other.
- If the two earphones pair and connect with each other successfully, press MFB of any earphone three times continuously and quickly, before earphone pair and connect with any bluetooth device the twins will upair and disconnect. If repair, please see the above item 7.