

Instructions Guide

EN

For first time use

Please tear off protective film on the pogo pins of earphones before using. Put earphones back in charging case to charge the earbuds.

How to pair

Take out both earbuds from the charging case. They will automatically power on and pair with each other.
The left earbud will automatically enter pairing mode and the LED light will blink blue and red, alternately. On your device search for "Majority Tru Bio" and tap to connect earbuds to your device.

Tips

1.Before using the earbuds, please read the instruction guide carefully and keep it for future reference.

2.The earbuds need to be fully charged prior to first time use.

3.If the earbuds are left unused for more than 2 weeks, please re-charge before use.

4.Please use the charging cable supplied in this box.

5.To switch off, when the power is on, don't connect or disconnect with any Bluetooth device for about three minutes.

6.When a warning voice sounds, the battery is low and needs to be charged.

7.If the two separate earbuds fail to pair with each other, tap MFB of the left earbud three times quickly and allow earbuds to connect again.

8.To manually unpair the earbuds from your device you can tap MFB of the earbuds three times. To re-pair see point 7.

9.If the earbuds fail to pair and connect, press MFB of L earbud three times and the earbuds will pair and connect with each other.

5

Specifications

EN

Specifications

Bluetooth Version	Bluetooth V 5.3+EDR
Bluetooth profiles	HSP/HFP/A2DP/AVRCP
Effective range	10 meters
Working time	Music: up to 6H Talk ing: up to 6H
Standby time	Up to 200H
Input	DC5V/ 450mA
Charging time	Approx. 1H
Weight(single earbud)	4.5g

Support

If you require further assistance with your new TWS, please contact our support team on the Majority website:
www.majority.co.uk/support

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majority.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

6

Safety Information

EN

1. Read these instructions.

2. Keep these instructions. Instructions are also available for download at www.majority.co.uk

3. Heed all warnings

4. Follow all instructions

5. Do not clean the apparatus near or with water

6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions

7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

9. Only use attachments/accessories specified by the manufacturer.

10. Unplug this apparatus during light storms or when unused for long periods of time.

11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.

12. No naked flame sources, such as lit candles, should be placed on the apparatus.

13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.
Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.
Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.
This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.

Risk of electric shock.
Do not open

Read all instructions carefully before use and keep for future reference

When servicing, use only identical replacement parts

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR

IMPORTANT: Please read all instructions carefully before use and keep for future reference


7

Instructions Guide

EN

MAJORITY

MAJORITY TRU BIO EARBUDS



Instructions Guide

8

Contents

EN

What's InThe Box?..... 2

Controls 3

Instructions Guide..... 4

Specifications..... 6

Warranty Safety..... 7

3 YEAR WARRANTY

Register your product online for a FREE 3 year extended warranty at: www.majority.co.uk

1


What's In The Box?

EN

Box Contents

A: Majority Tru Bio Earbuds
C: Instructions Guide

B: Charging cable- USB Type C
D: 3 X eartips

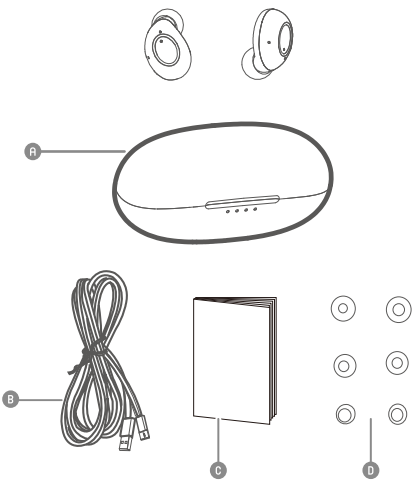


2

Controls

EN

Overview

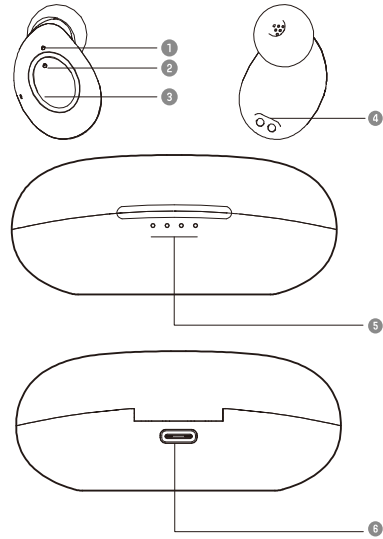

1. Mic
2. LED
3. MFB(Multi-function button)

4. Pogo pins
5. LED for power indicator
6. Type-c charging port

3

Instructions Guide

EN

Functions

Power on

Method 1:Take earbuds out from the charging case and they will automatically power on.
Method 2:Hold MFB for 2 seconds. Red and blue LED lights will flash alternately.

Power off

Method 1: Put earbuds back in the charging case and they will automatically power off.
Method 2: Hold MFB for 5 seconds. Red LED light will flash 3 times and the earbuds will power off.

Reject call

Hold MFB for 2 seconds.

Answer call

When there is an incoming call, tap MFB to accept the call. Tap once to end the call.

Play/pause

Tap MFB once to play music. Tap MFB once to pause music.

Skip track forward/backward

When audio is playing, double tap MFB on left / right earbud to skip track forward / backward.

Volume up/down

When audio is playing, hold MFB for 2 seconds on left / right earbud to volume up / volume down.

Charge the earbuds

Place the earbuds into charging case (pogo pins should be connected). The red LED will light up when charging. When fully charged, the red LED light will disappear.

Charge the case

Please charge the case via the provided USB Type-C cable.
When battery level is less than 25%, all four white power indicator LED lights will light.
When battery level is more than 25% but less than 50%, one white power indicator LED light will be on and the remaining three will flash.
When battery level is more than 50% but less than 75%, two white power indicator LED lights will be on and the remaining the will flash.
When battery level is more than 75% but less than 100%, three white power indicator LED lights will be on and the remaining one will flash.
When fully charged all four white power indicator LEDs lights will appear.

4

MAJORITY

www.majority.co.uk