

MAJORITY

Studio 1 Headphones



Instructions Guide

Contents	1
What's In The Box	1
Scope and Operation Instructions	2
Specifications	3
Support	3
Safety Information	4

Package Included

A. Majority Studio 1 Headphones

C. Audio Jack Adapter

B. Pouch

D. User Manual

A



B



C



 
D



1. The headphones can be used for computers, mobile phones, amps, guitars, Walkmans, CD Players and MP3 Players, etc.
2. To obtain the optimal sound effect from the headphones, please wear the headphones correctly. The L, and R marked on the headphone indicate left, and right, respectively.
3. When using headphones or using a headphone amplifier for connection, please note to decrease the volume to the minimum level, and then increase the volume slowly to avoid damage to your hearing or to the headphones.
4. To avoid affecting the life of the product, please take protective measures for moisture prevention, and high temperature prevention, etc.

Plug and Play

3.5mm plug and 6.35mm audio adapter is plug and play, with no need to install anything. Connect to your computer using the 3.5mm AUX or connect to amps or guitars using the 6.35mm jack.



Driver Diameter	Ø50mm
Impedance	32Ω
Frequency Response	15Hz~20kHz
Sensitivity	100±3dB
Cords	≥1.5meters
Plug	Ø3.5mm
Net Weight	≈376g

Support

If you require further assistance with your new Majority Studio 1 Headphones please contact our support team on the Majority website:

www.majority.co.uk/support

Warranty

All products come with a standard 12-month Warranty. All items must be registered on www.majority.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. Read these instructions.
2. Keep these instructions. Instructions are also available for www.majority.co.uk
3. Heed all warnings.
4. Follow all instructions.
5. Do not clean the apparatus near or with water.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time .
11. Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.



RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

■ This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.



IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference

When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

MAJORITY

www.majority.co.uk