

MP3 GO Player

16GB

User Manual

MAJORITY


What's In the Box?.....	3
Controls And Functions.....	4
Instructions Guide.....	5
Basic Operation.....	5
Music (transfer audio files, create playlists, music menu).....	6
Bluetooth.....	9
Voice Recordings.....	10
Folder View.....	11
Wallpaper.....	11
Stopwatch.....	11
Calendar.....	11
Settings.....	12
Troubleshooting & Support.....	13
Product Specification & Warranty.....	14
Safety Information.....	15




Register your product online for a FREE 3 year
extended warranty at: www.majority.co.uk

What's in the Box?

- A. Majority MP3 GO Player 16GB
- B. Earphones
- C. USB Type-C charging Cable
- D. Instructions Guide

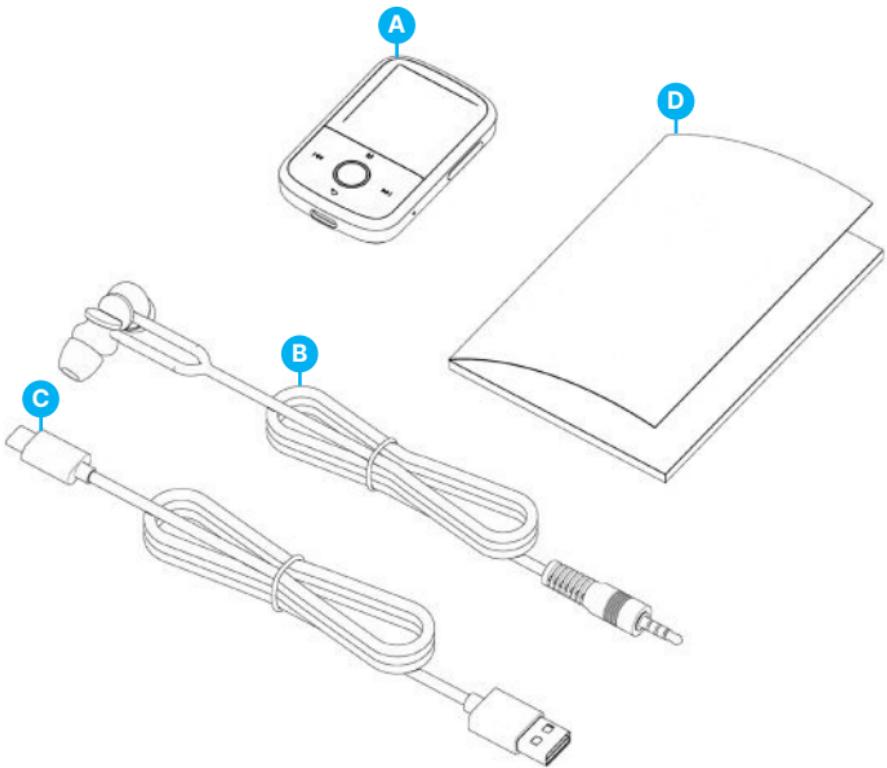

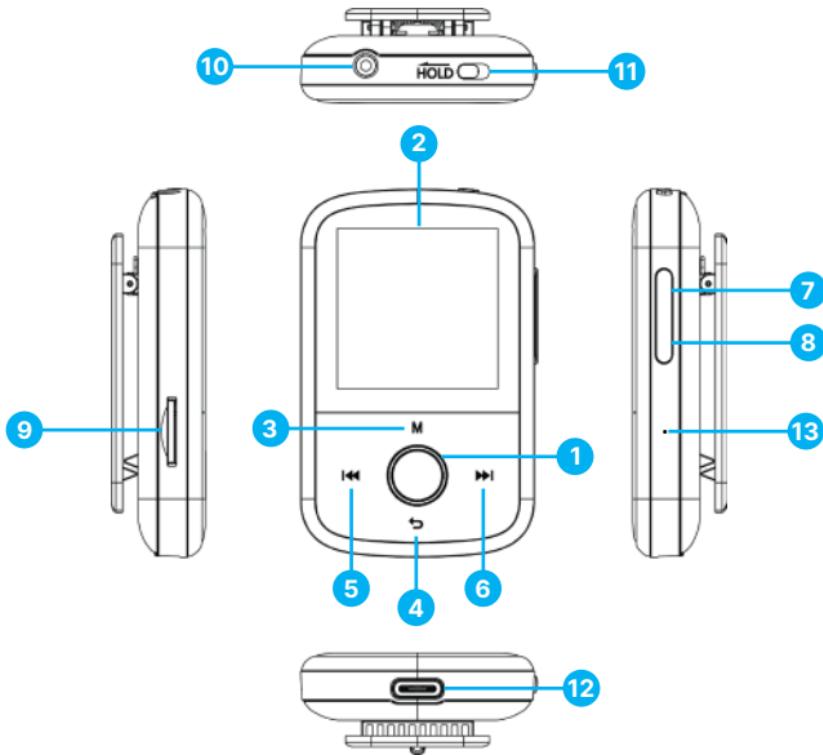MP3 Go Player

- | | |
|--|--------------------------|
| 1. Play/Pause/Power ON/OFF/OK/Enter Button | 8. Volume - |
| 2. 1.54" IPS screen | 9. Micro SD Card slot |
| 3. Menu Button | 10. Earphone Jack |
| 4. Return/ Back Button | 11. Hold Lock/Unlock |
| 5. Previous / Hold to fast backward | 12. Type-C Charging Port |
| 6. Next / Hold to fast forward | 13. Reset |
| 7. Volume + | |

Please note that the instructions within this user manual will refer to the button number on the unit e.g. (Ref. 'Number'), as per the diagrams on page 4.

Power ON/OFF

Press and hold the 'Power' button (**Ref.1**) for 2-3 seconds to switch ON/OFF.

Standby Mode

When the screen goes black, press the 'Power' button (**Ref.1**) to take the Majority MP3 GO Player out of Standby Mode.

Hold button- Lock/Unlock

Slide the 'Hold' button (**Ref.11**) to the left side to hold/lock the Majority MP3 GO or slide to the right to Unlock.

Please note: While the Majority MP3 GO is locked, the buttons do not function. Ensure that the device is unlocked to resume operations.

Navigate through the Menu/Sub-Menu options.

Use the 'Previous' and 'Next' buttons (**Ref.5 & 6**) to navigate and highlight your selection within each Menu or Sub- Menu, and then press the 'OK' button (**Ref.1**) to access/enter or confirm as described in this manual.

Charging

Prepare the Majority MP3 GO for charging. To begin, switch the device off before charging.

Using the USB Type-C cable provided in the box, insert the micro USB end into the USB charging port of the Majority MP3 GO (**Ref.12**), and the other end into a USB port of a PC or laptop. Alternatively, connect the Majority MP3 GO to a wall socket using the USB Type-C cable with a USB plug (the plug is not included in the box).

When connecting the Majority MP3 GO player with a PC or laptop using the USB Type-C cable, you will have two options displayed on the MP3 GO player screen to choose from: 'Charge & Transfer'- Select this option to charge and transfer audio files on the MP3 player.

'Charge & Play'- Select this option to charge and play at the same time. The battery indicator of the Majority MP3 GO will show when the device is running low and needs to be charged. It takes 3 hours for the Majority MP3 Go to be fully charged when the device is not in use.

File Transfer/Adding Music

Switch OFF the Majority MP3 GO using the 'Power' button (**Ref.1**) to prepare for transfer. Connect the Majority MP3 GO to your computer using the USB Type-C cable. (included in the box). Once connected with a PC or laptop, select 'Charge & Transfer' on the Majority MP3 Go, and then press the 'POWER' button (**Ref.1**) to confirm.

The Majority MP3 GO will be recognised on your computer the same way a USB stick is. Drag and drop audio files in supported formats from your PC into the Majority MP3 GO. Wait until files are completely transferred before removing the Majority MP3 GO.

Once transferred ensure the MP3 Go player is firstly and safely ejected from the File Explorer options of your computer before disconnecting the USB Type-C cable.

Compatible operating systems:

Windows 7/8/8.1/10/XP/11/Vista/2001/Mac OS.

Supported audio formats:

MP3/WMA/OGG/APE/FLAC/WAV/AA/AAX.

Play music

Press the 'MENU' button (**Ref.3**) to enter the 'Main Menu'.

Using the 'Previous'/'Next' buttons (**Ref.5 and 6**), search and select 'MUSIC'.

Press the 'ENTER' button (**Ref.1**) to confirm.

Select for example, 'All songs' and start playing your music.

Skip track

Press the 'Previous'/'Next' buttons (**Ref.5 & 6**) to skip to the previous/next track.

Fast forward/Rewind track

To rewind, press and hold the 'Previous' button (**Ref.5**). Release to resume.

To fast forward, press and hold the 'Next' button (**Ref.6**). Release to resume.

Create a Playlist

To create a playlist, select 'Music' from the Main Menu, and then create a playlist using one of these two methods:

Method 1:

While in 'MUSIC', scroll through the options using the 'Previous'/'Next' buttons **(Ref.5 & 6)** and select 'Create Playlist'. Press the 'OK' button **(Ref.1)** to enter. Scroll through the list of the audio files and pick one. Once highlighted, press the 'OK' button **(Ref.1)** to start playing. Press the 'Main Menu' button **(Ref.3)** and select 'Add to Playlist' from the menu options. Select the Playlist where you would like to add the audio file on. The device will then ask for confirmation. To add the song, select 'Yes'. To cancel, select 'No', or press the 'back' button **(Ref.4)** to choose a different playlist. Repeat the above steps to add more songs.

Method 2:

While playing a song/audio file that you would like to add on a Playlist, press the 'Menu' button **(Ref.3)**. Scroll through the options using the arrow buttons and select 'Add to playlist'. Press the 'OK' button **(Ref.1)** to confirm. Select the playlist where you would like to add the audio file and confirm your selection with the 'OK' button **(Ref.1)**.

MUSIC Menu options

When powering on the Majority MP3 GO, press the 'Menu' button **(Ref.3)**, to enter the MUSIC Menu. Press the 'OK' button **(Ref.1)** to enter.

The following options are available within the Music Menu when a song isn't playing:

Now Playing - select to resume playing.

All songs- select to view a list of all songs.

Artists- select to view music by artist.

Albums- select to view music by album.

Genres- select to view music by genre.

Playlists- select to play a playlist.

Create playlist- select to begin creating a playlist.

Please note: You can create in total 3 Playlists of up to 100 songs each.

While playing a song, press the 'MENU' button (**Ref.3**), to enter the 'Music Menu'. Use the 'Previous' and 'Next' buttons (**Ref.5 & 6**), access any of the below options. Press the 'OK' button to confirm (**Ref.1**) your selection.

Repeat

'Repeat 1' to repeat the song currently playing.

'Repeat all' to repeat the playlist currently playing.

'Repeat OFF' to cancel the repeat function already set.

Repeat Settings

Use this feature to create a repeat of a specific part of the song that you would like to play repeatedly by setting the 'Repeat Mode', the 'Reply Interval and the 'Reply times'.

Shuffle

Play audio files in random order. Select Shuffle as 'ON' or 'OFF', and then press the 'OK' button (**Ref.1**) to confirm.

Sound Settings- select the Variable Speed, Playback/Volume limit or the Equaliser.

Add to playlist- add a song to a playlist.

Remove from playlist- remove the song currently playing from the playlist.

Delete- delete the song playing from the MP3 GO player.

Bookmarks- Add a bookmark to start playing an audio file from a specific point. Once selected, the bookmarked audio will be available under 'Bookmarks'. You can set up to 10 Bookmarks.

The Majority MP3 GO can be paired via Bluetooth with earbuds or external speaker using the following steps:

1. Select 'Bluetooth' from the Main Menu, and then press the 'OK' button to enter **(Ref.1)**.
2. Activate the Bluetooth connection on the Majority MP3 GO by entering the 'Bluetooth Switch Control' and select 'Bluetooth Open'. Press the 'OK' button **(Ref.1)** to confirm, and then press the 'Back' button **(Ref.4)** to return to the Bluetooth Menu.
3. Activate Bluetooth on your device, making sure your device is visible and ready to pair. Search for devices on the Majority MP3 Go. While searching, a flashing icon (indicating Bluetooth) will be visible on the screen next to the battery icon, representing that the player is searching for available devices around to pair with.
4. A list of devices found will then be displayed on the Majority MP3 GO. Select the one you would like to pair with, and then press the 'OK' button **(Ref.1)** to confirm, match and connect. Wait a few seconds for the connection to be established. Once successfully paired, the screen will read 'Connected' and you can now start playing music from the Majority MP3 GO via your Bluetooth audio output device.

If the connection fails, please try the same steps again as described at points 2, 3, 4.

To disconnect the Majority MP3 GO, from a device already paired with remove from yours from the 'List of devices'.

To switch off Bluetooth on the Majority MP3 GO, access the 'Bluetooth Switch Control' and select 'Bluetooth OFF'.

Within the Main Menu, select 'Recordings' and then press the 'OK' button (**Ref.1**) to enter.

Create a voice recording.

- Select 'Start voice recording' and then press the 'OK' button (**Ref.1**) to start recording.
- The device will now begin recording using the built-in microphone.
- Once you finished recording, press the 'OK' button to Pause/ Stop (**Ref.1**).
- Press the 'Back' button (**Ref.4**) and then select 'Yes' or 'No' to save or delete the recording.

Record format - Select to choose the format of your recordings: MP3 or WAV recording file.

Record Settings- Select to choose and adjust the recorder Bitrate settings. Bitrate settings enables you to change the recording bitrate to 512, 768, 1024, and 1536kbps (Kilobits per second).

Recordings library- Select to view the list of your recordings.

FOLDER VIEW (View all files)

Select 'Folder view' from the Main Menu to view a list of all files/folders available on the Majority MP3 Go. Connect the Majority MP3 GO with a computer/laptop using USB Type-C cable included in the box to access 'Folder View' from your computer. Once connected, find the 'Majority MP3 GO'.

WALLPAPER

Select 'Wallpaper' from the Main Menu, and then press the 'OK' button (**Ref.1**) to change the wallpaper. Each time you press the 'OK' button (**Ref.1**), the Majority MP3 Go will generate a new wallpaper. There are 6 wallpapers to choose from.

STOPWATCH

Select 'Stopwatch' from the Main Menu, and then press the 'OK' button to enter (**Ref.1**). Start a timer, and then press the 'OK' button (**Ref.1**) to Pause or Stop. Press the 'Menu' button (**Ref.3**) to reset the data.

CALENDAR

Select 'Calendar' from the Main Menu, and then press the 'OK' button (**Ref.1**) to view the calendar date.

SETTINGS

To view and change the main settings on the MP3 Go player, select 'Settings' from the Main Menu. Use the 'Previous' and 'Next' buttons (**Ref.5 & 6**) to select your option, press the 'OK' button (**Ref.1**) to enter each sub-menu.

Language - Select to change the device menu language. Choose your preferred language from a list of 30 available.

Display Settings - Select to change the display screen 'Brightness', set a 'Backlight timer' or a 'Screensaver'.

Sleep Timer - Select to activate a 'Sleep Timer' with automatic turn Off settings.

Power Off Timer - Select to adjust the Auto Turn Off settings when there is no activity on the Majority MP3 GO.

Date and Time - Select and adjust the date and time settings.

Information - Select to view information related to the Firmware version and the remaining Disk space available of the Majority MP3 GO.

Factory Settings - Select to restore the Majority MP3 GO player to factory settings.

Format Device - Select to format the device and delete all data and files.

Please note: If you have an SD card inserted, this must be removed before using a 'Format Device', otherwise all data from the SD card will be deleted.

Observation	Potential Cause/Solution
The Majority MP3 Go is not powering on.	Check if the Majority MP3 Go is in Standby Mode. Check if the player is fully charged.
The Majority MP3 Go will not turn on, display is black.	Insert a pin into the reset hole 'Reset' (Ref.13).
Cannot play audio files uploaded.	Check if the audio files uploaded from computer are in supported formats.
Bluetooth external speaker/ audio output source cannot connect.	Check if Bluetooth is activated on the Majority MP3 Go player and, on your device, and reconnect. Check if your external speaker is compatible with Bluetooth version 5.0.
No sound.	Increase volume. Check if the audio files are in supported formats.
Buttons do not function.	Check if the Majority MP3 GO is locked. Slide to the 'HOLD' button to the right to unlock. Process a display reset by inserting a pin into the reset hole (Ref.13).

Support

If you require further assistance with your Majority MP3 GO, please contact our tech support team on the Majority website: www.majority.co.uk/support

Product Specification

Screen	1.54 inch 240*240 IPS screen
MP3 GO memory	16GB
Bluetooth Version	Bluetooth 5.0
Recording Format	MP3 Rec/ WAV Rec
Micro-SD card	Compatible with SD cards up to 128GB
Battery	Li-polymer rechargeable 300mAh
Charging time	3 hours

Warranty

To activate your extended 3 Year Warranty and gain access to all the benefits and lifetime technical support, register your Majority MP3 GO within 30 days of purchase on the Majority website: <https://www.majority.co.uk/register/>

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at www.majority.co.uk.
3. Heed all warnings.
4. Follow all instructions.
5. Do no clean the apparatus near or with water.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use accessories specified by the manufacturer.
11. Unplug this apparatus during light storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel.
13. No naked flame sources, such as a lit candle should be placed on the apparatus.
14. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping, splashing or objects filled with water.

The main plug is used to disconnect the device. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open.



Read all instructions carefully before use and keep for future reference.



When servicing, use only identical replacement parts.



ATTENTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION

RISQUE D'ELECTROCUSSION NE
PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

I hereby declare that the product:

Product Name: Majority MP3 Go Player

Model: 1000002974

Brand Name: Majority

Satisfies all the technical regulations applicable to the product within the scope of Council Directives 2014/35/EU and 2014/30/EU, 2009/125/EC, 2012/19/EU, 2014/53/EU, 2011/65/EU, 1907/2006.

2014/35/EU (LVD Directive)

EN62368-1:2014+A11:2017

2014/30/EU (EMC Directive)

EN55032:2015+A11:2020, Class B, EN IEC 61000-3-2: 2019, EN61000-3-3: 2013+A1:2019, EN55035: 2017, EN 301 489-1 V2.2.3 (2019-11), EN 301 489-17 V3.2.2 (2019-12)

2009/125/EC (ERP Directive)

EN50564: 2011, EN62311: 2008

2012/19/EU (WEEE Directive)

2014/53/EU (RED Directive)

EN55032:2015+A11:2020, Class B, EN IEC 61000-3-2: 2019, EN61000-3-3: 2013+A1:2019, EN55035: 2017, EN 301 489-1 V2.2.3 (2019-11), EN 301 489-17 V3.2.2 (2019-12), EN 303 345-1 V1.1.0 (2019-06), EN 303 345-3 V1.1.0 (2019-11), EN 303 345-4 V1.1.0 (2019-11), ETSI EN 300 328 V2.2.2 (2019-07), EN62368-1:2014+A11:2017, EN 62479: 2010, EN 50663:2017

2011/65/EU & 2015/863/EU (RoHS Directive)

1907/2006 (REACH Directive)

All essential test suites have been carried out.

This declaration is issued under the sole responsibility of iZilla Ltd.

Point of Contact: Eddie Latham | Founder

Signed: 

 
Date: Nov 2023

UK: iZilla Ltd, 49 Viking Way, Cambridge, CB23 8EL, UK

EU RP: AR Experts, P.O. Box 5047, 3620 AA Breukelen, The Netherlands

US: iZilla Ltd, C/O A.N. Deringer, Inc., 19520 Wilmington Ave, Rancho Dominguez, CA, 90220

Oakcastle is owned and operated by iZilla Ltd. Registered in England with Company No: 08520738



MAJORITY

www.majority.co.uk

