

DVD

USER MANUAL

MAJORITY

HOME AUDIO • CAMBRIDGE

Contents	2
Box Contents	3
Controls & Functions	4
Getting Started	7
DVD Operation	8
USB Operation	9
Playing JPEG/Picture CD & MP3 Discs	10
System Set-Up	12
Troubleshooting	16
Spec & Warranty	17
Safety Information.....	18

 
3

YEAR
WARRANTY


Register your product online for a FREE 3 year
extended warranty at: www.majority.co.uk

WHAT'S IN THE BOX

- A. Majority DVD Player
- B. Remote Control
- C. RCA AV Cable
- D. HDMI Cable
- E. User Manual

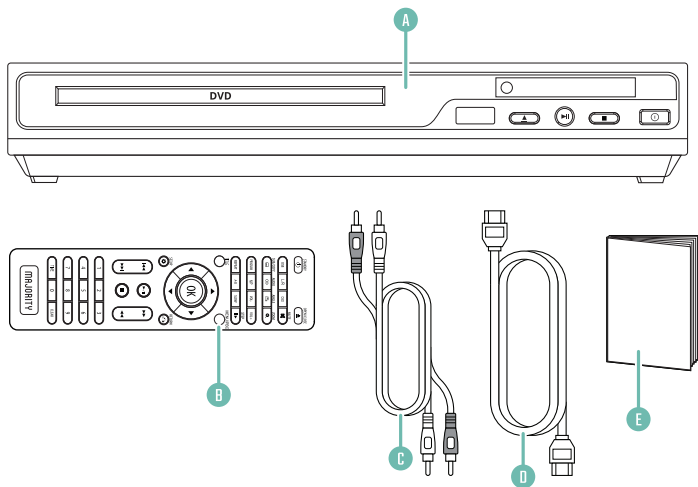


REMOTE CONTROL

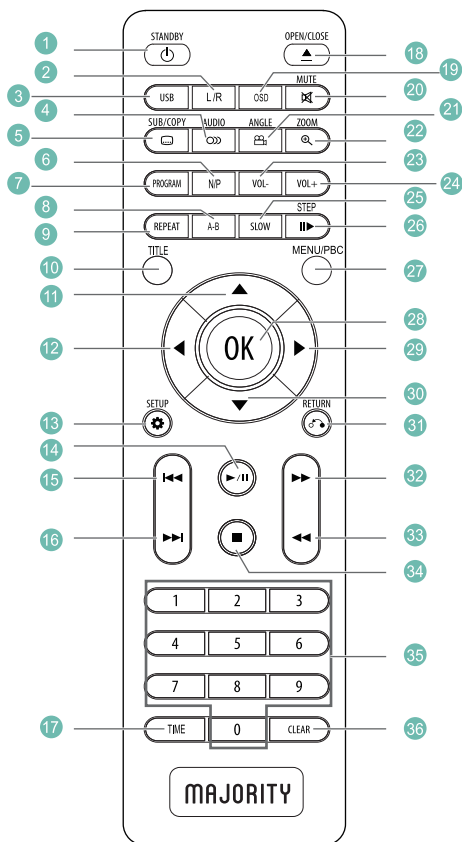 

1. On/Off
2. L/R: Use for VCD or CD discs. Select left or right channel or stereo
3. Switch to DVD or USB mode
4. Language
5. Subtitles
6. N/P: Switch between NTSC or PAL
7. Programme
8. Press to repeat certain sections. Press button on start point (A) and the endpoint (B) to select section. Cancel by pressing button a third time.
9. Repeat: Press repeatedly in DVD mode to scroll through: Repeat a title, chapter, track or go to the beginning. In SVCD, VCD or CD mode: Track repeat, all repeat or repeat cancel.
10. Title
11. Navigate up
12. Navigate left
13. Setup
14. Play/Pause
15. Previous Chapter/Track
16. Next Chapter/Track
17. Time
18. Open/Close DVD Tray
19. OSD
20. Mute
21. Angle
22. Zoom: Press to zoom in, press again to zoom out. Use arrow keys to move picture
23. Volume Down
24. Volume Up
25. Slow
26. Press to play picture by picture. Press Play to return to normal playback.
27. Menu/PBC: Playback control
28. Enter/Confirm
29. Navigate right
30. Navigate down
31. Return: Return to VCD menu
32. Fast-forward
33. Rewind
34. Stop
35. 0-9/10+: Select desired track/chapter in menu selection
36. Press to clear input selections

 FRONT & BACK VIEW

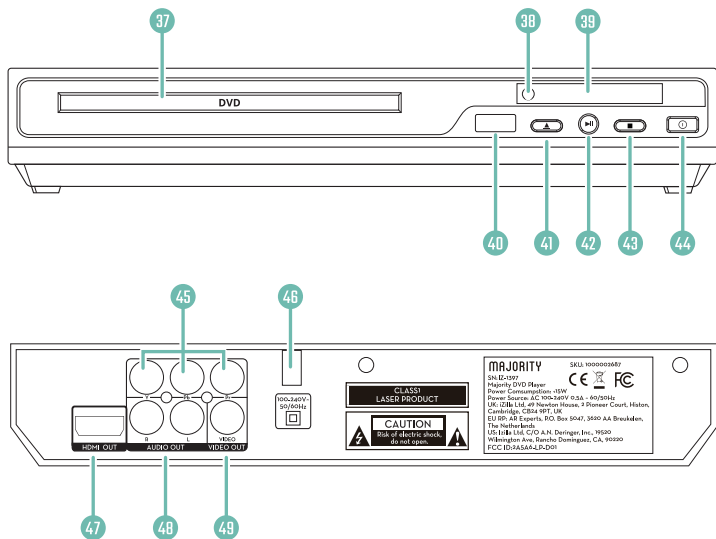

- | | | | |
|-----|---------------|-----|------------------------|
| 37. | DVD Tray | 44. | Power On/Off |
| 38. | Remote Sensor | 45. | (Y.Pb/Cb.Pr/Cr) Output |
| 39. | Display | 46. | Power Cable Outlet |
| 40. | USB Port | 47. | HDMI Output |
| 41. | Open/Close | 48. | 2 x Audio Output ports |
| 42. | Play/Pause | 49. | Video Output |
| 43. | Stop | | |

Setting Up

Connect the power plug of the DVD player to a wall outlet. The power indicator and timer on the front panel will illuminate.

Follow the guidance below for connecting your DVD player:

Cable Connection Options

1a. Connect a RCA cable between the 2 channel Audio Output port and the RCA input on your TV.

1b. Connect a HDMI cable between the HDMI Output on the back panel of the DVD player (**Ref.47**) to the HDMI input on your TV.

1c. Connect a (Y Pb/Cb Pr/Cr) cable via the (Y/Cb/Pb Cr/Pr) Output of the DVD player (**Ref.45**) to your TV (R/L/Video port and cable).

The following DVD formats can be played: DVD, DVD-R-RW, CD Video.

1. Ensure that your TV is set to the correct mode for DVD playback.
2. Plug in the DVD player and press the 'Power' button to turn the unit on. You can do this on the unit (**Ref.44**) or via the remote (**Ref.1**).

When the machine is switched on, pressing the POWER button on the remote control will make it go into standby mode. Press the button again and the machine will switch on.

WARNING: If the product will not be used for an extended period of time, it is advisable to unplug it for safety.


3. Press the Open/Close button on the front panel (**Ref.41**) or on the remote control (**Ref.18**) and place a DVD disc on the disc tray. Press the Open/Close button again to close the tray.
4. The DVD will read the DVD disc and begin playing. You can control the playback and settings via the remote control.

This device has a USB port in the front interface for AVI video format with maximum resolution of 720X576 or 720X480.

The USB stick used for playback should be for up to 32GB and needs to be formatted in FAT32 before adding the video files on it.

Insert a USB device into the USB port (**Ref.40**).

Press the DVD/USB button on the remote control (**Ref.3**) to switch the source to USB. The DVD player will read and display the file list from the USB drive.

Browse through the file list by pressing the  buttons (**Ref.11, Ref.12, Ref.29, Ref.30**) on the remote control. Select a file by pressing the Enter button (**Ref.28**) of the remote control.

PLAYING JPEG/PICTURE CDS

The following formats can be played: Jpg, Jpeg, CD Photo

Press the STOP button and 12 small pictures will show on the TV screen.

Press the ▲/▼/◀/▶ buttons to select the desired picture to view. (**Ref.11**), (**Ref.12**), (**Ref.29**), (**Ref.30**).

To access the instructions menu, use the ▲/▼/◀/▶ buttons to navigate and then press the ENTER button to confirm. The following options will display:

1. PROG - Select to change picture transform mode
2. STOP - Entering picture preview mode
3. PREV - Previous picture
4. NEXT - Next picture
5. PLAY - Play picture
6. UP - Mirror image in vertical
7. DOWN - Mirror image in horizontal
8. LEFT - Rotate 90 degrees anticlockwise
9. RIGHT - Rotate 90 degrees clockwise
10. ZOOM - Change zoom mode
11. FAST FORWARD - Zoom in the picture
12. FAST REWIND - Zoom out the picture
13. ▲/▼/◀/▶ - Move zoom focus for picture.

PLAYING MP3 DISCS

The following formats can be played: Mp3, WMA, CD Audio, CD-R-RW, CD

Whilst a MP3 disc is playing, a menu screen will display on the TV. Press the ▲/▼ buttons (**Ref.11, Ref.30**) to scroll through tracks or folders. Press the ENTER button to select the track or folder.

Press the PROG button in file play mode. The screen will then display the total track number and the current track playing. Use the digit buttons (**Ref.35**) to key in and select the track or use the ▲/▼/◀/▶ buttons to shift to the track and press the ENTER button (**Ref.28**) to play the track.

MENU OPERATION

Setup options

Setup options on System, Language, Audio, Video, Speaker and Digital can be accessed from the main setup menu.

- Press **SETUP** on the remote control to display the main menu.
- Use **UP/DOWN** arrows to move up or down in the menu. Then press **ENTER** to confirm the selection and move to submenu.
- Use **LEFT/RIGHT** arrows to move the cursor and **UP/DOWN** arrows to the desired option, then press **ENTER** to confirm.
- Press **LEFT** arrow to return to the previous menu. The setup options for this function are now finished.
- To end the setup, press the **SETUP** button again.

System setup

TV system: for composite only

Based on TV hardware, select proper options: NTSC, PAL or AUTO. Default is PAL.

Screen Saver

Use this option to turn the screen saver ON or OFF

Resolution

On HDMI, select one of the following video output resolution: OFF, 720P, 1080I, 1080P.

Video setup

Your video settings must correspond with the type of connection to your TV or other equipment.

Aspect Ratio

Use this submenu to select the aspect ratio.

Password

Use the numerical keys to set your personal 4-digit password. The default and master password is "0000".

Parental Control

Use this option to set an appropriate rating to restrict viewing for children. The options available correspond to the film ratings on the disc.

Default

Use this option to restore the default factory settings.

Resume

If this option is set to "ON" and the power is turned off, the player will remember where it stopped and when the power is resumed, it will continue to play from that point.

Language setup

Select options for your on-screen and menu language and subtitles.

OSD language

Select a language to be used on on-screen display and setup

Audio language

Use this option to set the audio (dubbing) language.

Subtitle language

Use this option to set the subtitle language, or choose 'off' to hide the subtitles.

Menu language

Use this option to set the film's menu language.

Audio setup

Audio out

Use this menu to select your audio output.

Key

Use UP/DOWN arrows to adjust the key.

Video setup

Under this menu you can select options for your image output.

Brightness

Use UP/DOWN arrows to adjust the brightness.

Contrast

Use UP/DOWN arrows to adjust the contrast.

Hue

Use UP/DOWN arrows to adjust the hue.

Saturation

Use UP/DOWN arrows to adjust the saturation.

Sharpness

Use UP/DOWN arrows to adjust the sharpness.

Speaker setup

Select options including downmix, subwoofer, center delay, rear delay and size of front, center and rear speakers.

Downmix

This setting is for Home Theater. If two channels is required, select the Stereo

Digital setup

Use this menu to select digital setup options including OP, dynamic range and dual/mono.

OP mode

- For nighttime playing, select LINE OUT to set volume at a lower level.
- For daytime playing, select RF REMOD to set volume at a

Dynamic range

When LINE OUT is selected, use this setting to adjust the line out ratio for a different effect. The audio signal peak value will be at the minimum when set to Full; peak value will be at the maximum when set to Off.

Dual mono

Choose this option to set up the left (L) and right (R) mono output; there are four modes in this option.

Symptoms	Solutions
No power/function	Check that the power is switched on at the wall. Check that the power adaptor is properly connected to power outlet.
No video	Make sure that the video cables are connected correctly. Reset the settings of the DVD player. Check that the input setting on the TV is correct.
No audio	Make sure that the audio cables are connected correctly. Make sure that the coaxial connected stereo is powered on. Reset the settings of the DVD player.
Distorted video	Clean DVD disc of dust/dirt The playback is on rewind/fast forward mode.
Unable to play	Place a DVD disc in the disc tray. Place the disc in on the correct side up. Clean DVD disc of dust/dirt. Close the setup of the DVD player. Check that the file is compatible with the unit.
Remote Control does not work	Aim the Remote Control towards the front panel of the DVD player. Use the Remote Control closer to the DVD player. Check the battery level of the batteries.

SUPPORT

If you require further assistance with your new DVD player, please contact our support team on the Majority website: www.majority.co.uk/support

SPECIFICATIONS

Power Supply	AC 100-240V 0.5A
Frequency Response	~ 50/60Hz
Power Consumption	<15W
Compatible Connections	HDMI A/V RCA Output USB Input (Y Pb/Cb Pr/Cr) R/L/Video
Compatible Formats	DVD: DVD, DVD-R-RW, CD Video AUDIO: Mp3, WMA, CD Audio, CD-R-RW, CD PHOTO: Jpg, Jpeg, CD Photo
Dimension (WxHxD)	22.5 x 19 x 4.5 cm 742g

WARRANTY

All products come with a standard 12 month warranty. All items must be registered on www.majority.co.uk for the warranty to be valid. Once on the web page, use the menu to find "register your product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at www.majority.co.uk
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste.

Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.

Do not open



Read all instructions carefully before use

and keep for future reference



When servicing, use only identical

replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference



MAJORITY

WWW.MAJORITY.CO.UK